



 
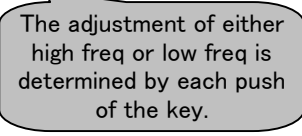 
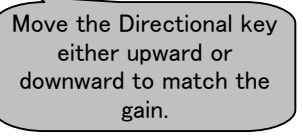 
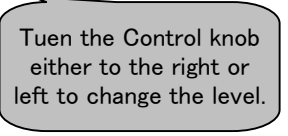 









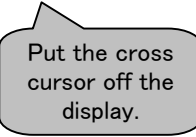 
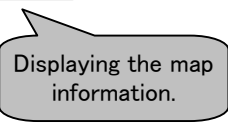 
 


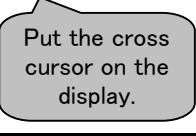 
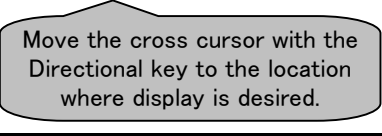 
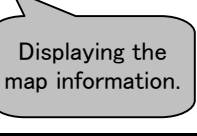 



POWER	Power : ON/OFF	When the power key is pushed, the power will be on.
		When the power key is pushed again, the power will be off.
DISPLAY	To change the display of the Plotter (Sounder) screen	When the “DISP” key is pushed, it will change to the following display: “Plotter+Sounder screen 1”, “Plotter+Sounder screen 2”, “Plotter screen” and “Sounder screen”.(Up to 15 different combinations of the display can be used.)
	Cursor: On/Off	Each time the “CURSOR” key is pushed, the cross cursor will go on and off.
CURSOR	To move the cursor around	The cross cursor will move in the direction that the Directional key is pushed.
	Map: Magnification / Reduction	<b>When the cross cursor is not displayed:</b> The display will be magnified with the ship’s position at the center. <b>When the cross cursor is displayed:</b> The display will be magnified with the cross cursor at the center. <b>When the cross cursor is not displayed:</b> The display will be reduced with the ship’s position at the center. <b>When the cross cursor is displayed:</b> The display will be reduced with the cross cursor at the center.
MARK	To change the color of the mark	Each time the “MARK COLOR” key is pushed, the color will change in the following order: “Red, yellow, dark blue, blue, pink, white, and green”
	To record the current position	→  Put the cross cursor off the display. Push either one of the keys.
	To record the point using the cross cursor	→  →  Put the cross cursor on the display. Move the cross cursor with the Directional key to the desired point. Push either one of the keys.
WAYPOINT	To go to the desired point	→  →  → Put the cross cursor on the display. Move the cross cursor with the Directional key to the desired point. Check if the cursor is placed at the desired point. Press ENT
	To go to the previously recorded “Mark” (To operate using the cursor)	→  →  → Put the cross cursor on the display. Move the cross cursor to the mark using the Directional key. Check if the desired mark number is displayed. Press ENT
	To go to the previously recorded “Mark” (To operate using number entry)	→  →  → Put the cross cursor off the display. Display the “setting of waypoint” menu. Set the number of the mark. Press ENT

TRACK	To start/pause the plotting of the track	 Each time the “ON/OFF” key is pushed, the plotting of the track will start/pause.
	To change the color of the track	 Each time the “TRACK COLOR” key is pushed, the color will change in the following order: “Red, yellow, dark blue, blue, pink, white, and green”
SOUNDER	To adjust the GAIN of the sounder (Perform the same operation for the STC)	 →  →    
	To adjust the depth scale	 Each time the “RNG-” keys is pushed, the depth scale will move to shallower depth.   Each time the “RNG+” key is pushed, the depth scale will move to deeper depth.
	Go to high frequency/ low frequency/ dual frequency display	 Each time the “MODE” key is pushed, the display will change in the following order: “Dual frequency, High-frequency, and Low frequency”.
MENU	To display the menu	 Each time the “MENU” key is pushed, the menu display will go on and off.
	To select the items on the menu	 Move the Directional key either upward or downward and set the cursor on the menu item of choice. Advancing to the next menu is done by moving the Directional key to the right.
	To return to the previous menu	 Each time the “MENU” key is pushed, it will return to the previous menu.
	To change the items on the menu	 Move the Directional key to the right or left in order to change the content of the menu items.
MAP INFORMATION	Display the map information of the current position	 →   
	Display the map information of the cursor position	 →  →    
	Turning the map information OFF	 Push the “MENU” to return to the normal display.
# 1		

#1 Variation will occur depending on which C-MAP card is used.