



FULL MENU REFERENCE

COLOR ECHO SOUNDER

((Broadband))

CVS-FX1

This product is specifically desingned to be installed on boats and other means of maritime transport. If your country forms part to the EU, please contact your dealer for advice before attempting to install elsewhere.

CVS-FX1 Full Menu Reference

Doc No: 0093101114

Document revision history

No.	Doc. – Rev. No.	Date Revised (Y/M/D)	Revised content
0	0093101114-00	2011/11/09	First edition
1	0093101114-01	2012/10/01	Menu List, Chapter 2, Chapter 5
2	0093101114-02	2014/03/10	Revision: (From software KM-F11 Ver. 1.01 34 to Ver. 1.** **)
3	0093101114-03	2014/04/11	Revision: (From software KM-F11 Ver. 1.01 35 to Ver. 1.** **)
4			
5			
6			
7			
8			
9			
10			

Document No. Revised Version Norm

When part of the document needs to be revised, the document has advanced revised number. The document No. is indicated at the lower right side on the cover and at the left or right side of the footer region of each page.

© 2011-2014 Koden Electronics Co., Ltd. All rights reserved.

No part of this publication may be reproduced, transmitted, translated in any form by any means without the written permission of Koden Electronics Coo., Ltd. The technical descriptions contained in this publication are subject to change without notice. Koden assumes no responsibility for any errors, incidentals or consequential damages caused by misinterpretation of the descriptions contained in this publication.

0093101114-03 i

Important notice CVS-FX1

Important Notice

 For copy and transcription of this Operation Manual (hereinafter referred to as this manual), permission from Koden is needed. Koden prohibits the un-authorized copy and transcription of this manual.

- If this manual is lost or damaged, consult a dealer of Koden or Koden.
- The specification of the products and the contents in this manual are subject to change without notice.
- The contents displayed on the menu of product may be different from the expression of this manual. The fonts and shapes of the keys and menus in the illustration may differ from the actual ones, and some parts may be omitted.
- Koden is not liable for damages and troubles arisen from misunderstanding of the contents in this manual.
- Koden is not liable for any damages caused by earthquake, lightning, wind and flood damage and fire for which Koden is not responsible, and actions by third parties, other accidents, customer's unintended error/abuse and the use under other abnormal conditions.
- Koden is not liable for damages of accompaniment (change/loss of memorized content, loss of business profit, stop of business) arisen from use or failure of our products.
- If the stored data are changed or lost, irrespective of causes of troubles and damages, Koden is not liable for them.
- Koden is not liable for any damages arisen from malfunction caused by combination of software and connected equipment in which Koden is not engaged.

ii 0093101114-03

For Your Safe Operation

Symbol used in this Operation Manual

The following graphical symbols are used in this manual. The meaning of each symbols shall be well understood and apply at maintenance and inspection works.

Symbol	Meaning
Warning	Mark for warning This symbol denotes that there is a risk of death or serious injury when not dealing with it correctly.
A	Mark for danger high voltage This symbol denotes that there is a risk of death or serious injury caused by electric shock when not dealing with it correctly.
Caution	Mark for caution This symbol denotes that there is a risk of slight injury or damage of device when not dealing with it correctly.
	Mark for prohibition This symbol denotes prohibition of the specified conduct. Description of the prohibition is displayed near the mark.

Caution items on equipment

A	Be careful of a high voltage inside. A high voltage, which may risk your life, is used. This high voltage remains in the circuit after you have powered off switch. To prevent touching the high voltage circuit inadvertently, the hard cover is provided to the high voltage circuit and the high voltage caution label is affixed. Ensure to power off switch for your safety and discharge the electricity remaining in the capacity before starting to check. An engineer authorized by our company should inspect and maintain
Warning	Be sure to power off in the boat. If the power switch is inadvertently powered on during work, you will be electrified. To prevent such accident from occurring, ensure to power off in the boat and the power of equipment. Furthermore, it is safer to hang the caution tag described as [Under Work] near the power switch of equipment.
Warning	Be careful of dust Inhaling dust may cause A respiratory disease. When cleaning the inside of equipment, be careful not to inhale dust. Wearing a safety mask is recommended.
Caution	Caution on location of equipment Do not install the equipment where it is excessively damp and suffers from excessive water drops.

0093101114-03 iii

Caution	Measures against static electricity The static electricity may be generated from the carpet on the floor in the cabin or clothes made of synthetic fiber. The static electricity may destroy the electronic parts on the circuit board. Handle the circuit board, taking the measure of static electricity free.
Caution	Caution at installation of a transducers Install the transducer at the location where it is not affected by bubble and noise The bubble and noise seriously degrade the performance of this unit.

Cautions on handling

Warning	Do not disassemble or modify. It may leads to trouble, fire, smoking or electric shock. In case of trouble, contact our dealer or our company.
Warning	In case of smoke or fire, boat power off and the power of this unit. It may cause fire, electric shock or damage.
	Be cautious of remaining high voltage. A high voltage may remain in the capacitor for several minutes after you have powered off. Before inspecting inside, wait at least 5 minutes after powering off or discharge the remaining electricity in an appropriate manner. Then, start the work.
Caution	The information displayed in this unit is not provided directly for your navigation. For your navigation, be sure to see the specified material.
Caution	Use the specified fuse. If un-specified fuse is used, it may cause a fire, smoke or damage.
Caution	Whenever transmitting, be sure to submerge the transducer in water first. If transmitted without submerging the transducer, it may be damaged.

iv 0093101114-03

Contents

Document revision history	i
Important Notice	ii
For Your Safe Operation	iii
Contents	v
Introduction	ix
Menu List	x
Chapter 1 Echo Adjust/ Display Setup	1-1
1.1 Change of TX Power	
1.1.1 TX Power (HF)	1-1
1.1.2 TX Power (LF)	1-1
1.2 Change of dynamic range of Echo	1-2
1.3 Making of reflection strength at shallow and deep depth equal	1-2
1.3.1 Changing of TVG Type	1-2
1.3.2 Changing of TVG Strength	1-3
1.3.3 Changing of TVG Depth	1-3
1.3.4 Changing of TVG Adjust	1-3
1.4 Displaying of A Scope	1-4
1.5 Display in of white line	1-4
1.6 Changing of screen	1-5
1.6.1 Changing of Background Color of images of echo sounders	1-5
1.6.2 Changing of display color of echo sounder images	1-5
1.6.3 To display of Scale/Not to display	1-6
1.6.4 Changing of Scale Position	1-6
1.6.5 Changing of Scale Value	1-6
1.6.6 Displaying of Color Bar Scale	1-6
1.6.7 Set the Image Title as frequency/ HFX LFX	1-7
1.6.8 Changing of Image Direction	1-7
1.6.9 Changing of display alignment of images	1-7
1.6.10 Detailed display of image resolution and lapse time	1-8
1.6.11 Changing of Width of Zoom Image	1-8
1.6.12 Zoom Image Split	1-9
1.7 Displaying of Water Temp Window	1-9
1.7.1 Display of Water Temp Window/Not to display	1-10
1.7.2 Changing of W.Temp. Graph Range	1-10
1.8 Changing of Depth Font Size and Depth Position/Display of Sub Depth Value	1-10
1.8.1 Changing of Depth Font Size	1-10
1.8.2 Changing of display position of depth	1-11
1.8.3 Display of Sub Depth Value	1-11
1.9 Changing of W.Temp. Font size	1-11
1.10 Displaying of Speed Value/Not to display	
1.11 Display of Detection Area/Not to display	1-12
1.12 Widening of Bottom Search Range	1-13
1.13 Selection of a Sounding Source (frequency)	1-13

1.14 Setting depth to perform Bottom Limit searching at Auto-Range / Auto-Shift	1-14
1.15 Selecting method for Shift Operation (per each image/for whole screen at the same time)	
1.16 Selecting Range Operation (per image/Whole screen at same time)	1-15
Chapter 2 Alarm	2-1
2.1 Use of Bottom Alarm	
2.1.1 Start/Stop of Bottom Alarm	2-1
2.1.2 Setup of Upper Depth	2-1
2.1.3 Setup of Lower Depth	2-2
2.2 Use of Fish Alarm	
2.2.1 Start/Stop Fish Alarm	
2.2.2 Setup of Fish From	2-3
2.2.3 Setup of Fish Span	2-3
2.2.4 Setup of Upper Level	2-3
2.2.5 Setup of Lower Level	
2.2.6 Setup of Alarm Signal Length	
2.2.7 Setup of Fish Image	
2.3 Use Water Temp Alarm	
2.3.1 Start/Stop Water Temp Alarm	
2.3.2 Setup of Upper Temp Alarm	
2.3.3 Setup of Lower Temp Alarm	
2.4 Use Speed Alarm	
2.4.1 Start/Stop Speed Alarm	2-6
2.4.2 Setup of Speed Limit	2-7
2.5 Use the alarm at waypoint navigation	2-7
2.5.1 Sound alarm at arrival at waypoints	2-7
2.5.2 Sound alarm when XTE to waypoint has been found	2-8
2.5.3 Setup of NAV Alarm Range	2-8
2.6 Voltage Alarm	2-9
2.7 Confirmation of alarm conditions	2-9
Chapter 3 NAV Operation	3-1
3.1 Starting waypoint NAV	
3.2 Cancellation of waypoint NAV	
3.3 Editing of Waypoint	
3.4 Deletion of waypoints	
3.5 Deletion of all waypoints in the waypoints list	
3.6 Displaying of NAV Display	
3.6.1 Selection of NAV Display	
3.6.2 Selection of types of NAV Display	
Chapter 4 Image List	4-1
4.1 Recall of Image	
4.2 Editing of Image Comment	
4.3 Deleting of Image	
4.4 Deletion of all images in the Image List	

Chapter 5 System Setting	5-1
5.1 Allocation of function keys (F1/F2) to aimed operation	5-1
5.1.1 Setup of [F1] key	5-1
5.1.2 Setup of [F2] key	5-2
5.2 Display/No display of Guide	5-2
5.2.1 Display/No display of Guide Window	5-2
5.2.2 Display/No display of Func. Guide Window	5-2
5.3 Display/No display of Header	5-2
5.4 Limitation of Menu to be changed	5-3
5.5 Use of Sona-tone	5-3
5.6 To reduce frequency of Bubble	5-3
5.7 Display/No display of Clock	5-3
5.8 Changing of buzzer volume of operation	5-4
5.9 Changing of Water Temp Source	5-4
5.10 Changing of Speed Source	5-4
5.11 Use of EXT Trigger Type	5-5
5.12 Correction	5-5
5.12.1 Setting of draft	5-5
5.12.2 Correction of Sonic Speed	5-5
5.12.3 Correction of Water Temperature	5-6
5.12.4 Correction of Boat Speed	5-6
5.12.5 Adjustment of transducer's gain	5-6
5.12.6 Adjustment of Power Supply Frequency	5-7
5.13 Use of Heaving	5-7
5.13.1 ON/OFF of Heaving	5-7
5.13.2 Setup of sensor's positions for Heaving	5-8
5.14 Setup of transducer	
5.14.1 Setup of type of high frequency transducer	5-8
5.14.2 Setup of type of low frequency transducer	5-9
5.14.3 Setup of frequency and beam angle for HF 1 transducer	
5.14.4 Setup of frequency and beam angle for HF 2 transducer	5-10
5.14.5 Setup of frequency and beam angle for LF 1 transducer	
5.14.6 Setup of frequency and beam angle for LF 2 transducer	
5.14.7 Setup of Bottom Limit HF	
5.14.8 Setup of Bottom Limit LF	5-11
5.15 Setup of Basics	
5.15.1 Selection of Language	
5.15.2 Changing of Range & Speed Unit	5-12
5.15.3 Changing of Depth Unit	
5.15.4 Changing of Temperature Unit	
5.15.5 Setup of Local time Offset	
5.15.6 Selection of GPS	
5.15.7 Initialization of GPS	
5.16 Setup of NMEA	
5.16.1 Setup of baud rate of NMEA1 (J8)	
5.16.2 Setup of baud rate of NMEA2 (J3)	
5.16.3 Selection of NMEA Output	5-14

5.16.4 Display of input sentence on NMEA Monitor	5-14
5.17 Customization	5-15
5.17.1 Changing of color of displayed items	5-15
5.17.2 Changing of coloration of image of Color Bar Scale	5-16
5.17.3 Changing of red coloration of image of fish display	5-16
5.17.4 Distinction of the sea bottom	5-17
5.18 Displaying of Simulation	5-17
5.18.1 Displaying of prepared Simulation	5-17
5.18.2 Selection of simulation	5-17
5.19 To lock the keys not to be operated	5-18
5.20 Returning to the Initialize	5-18
5.21 Confirming of system conditions	5-19
5.22 Updating of Program	5-20
5.23 Storage of settings in internal memory	5-21
5.24 Recall settings from internal memory	5-21
5.25 Setup of Network	5-21
5.25.1 Changing of IP Address	5-22
5.25.2 Acquisition of an IP Address from DHCP server	5-22
5.25.3 Changing of Subnet Mask	5-22
5.25.4 Output Data Method/Not output	5-22
5.25.5 Input Data Method /Not input	5-23
5.25.6 Acquisition of images from Image List by PC	5-23
Chapter 6 CCD Camera	6-1
6.1 Display of CCD camera images	6-1
6.1.1 Scrolling of CCD camera images	6-1
6.1.2 Return the images of CCD camera to the center	6-1
6.1.3 Zoom/Reduce of CCD camera images	6-2
Chapter 7 INDEX	7-1

CVS-FX1 Introduction

Introduction

CVS-FX1 is an LCD color echo sounder that can display images in 4 optional frequencies.

This unit equipped with the latest digital process can accurately display circumstances in the water under all conditions, with a good match with the high brilliance 12.1 inch LCD.

The main features of this unit are as follows:

- This unit is a multi-frequency echo sounder with broadband transducers.
- With a simple operation on a menu, frequencies up to 4 can be optionally set within a wide range.
- With digital reception processing, the high resolution in shallow depth and the noise reduction capability in deep depth are both attainable. In addition, optimum images can be displayed by the auto mode function.
- The high-performance LCD maintains high visibility under any conditions.
- With adoption of a special filter (AR coated), images can be seen clearly even under the direct sunlight. Well protected against reflection on the LCD screen and dew condensation.
- This unit has high waterproof level and can be installed in an open bridge.
- Sona-Tone[™] (Sonar sound) function provides fish school status by sound...
- Up to 500 graphic images can be stored. Homing function is available by pushing event key while recalling the stored images, to provide navigation guidance to the designated position (optional GPS is required).
- Various alarm functions are available (Bottom, school of fish, water temperature*, vessel speed*, arrival*, XTE*, power source).
 - (Note: The mark * denotes that the connection of optional sensors is required)
- By flush mounting, the unit can be easily installed from the front side.
- RGB analog output to an external monitor is provided as standard. The use of external
 monitor enables to observe the echo sounder images from the place distant from the main
 unit (External monitor is owner supply).

0093101114-03 ix

Menu List CVS-FX1

Menu List

The factory deafult setting is shown in bold and underlined.

```
1. [SHIFT/(M)OFF] key
            - Shift OFF (OFF, ON)

    Range Mode (Auto range, <u>Manual</u>, Auto shift)

2. [NORMAL/ZOOM] key
         Normal/Zoom (Normal range operation, Zoom range operation)
3. [GAIN-R/SEL], [GAIN-L/SEL]

    Individual gain (0.0 ~ 10.0: TVG type Optimized 6.0, TVG type Manual 3.0)

            Interlocking gain (0.0 ~ 10.0: 0.0)
4. [RANGE] key
           Interlocking range (5.0, 10.0, 20.0, 50.0, 100, 150, 300, 500 m: 50.0 m)

    Individual range (5.0, 10.0, 20.0, 50.0, 100, 150, 300, 500 m: 50.0 m)

             Zoom range (1, 2.5, 5, 7.5, 10, 15, 20, 25, 30, 40, 50, 60, 70, 80, 90, 100, 120,
                                 140, 160, 180, 200, 220, 240, 260 m: 10m)
5. [SHIFT] key
             Interlocking shift (0 ~ 3000 m: 0 m)
            Individual shift (0 ~ 3000 m: 0 m)
6. [BRILLO] key
          Screen brilliance (1 ~ 10: <u>10</u>)
            Panel brightness (1 ~ 10: <u>10</u>)
7. [EVENT] key
                            (Store Position, Store image, Homing)
8. [F1] key
                            (Shift Digit Input, IR, Color Erase, Noise Reduction, Background
                              Color, TVG Adjust, White Line, A Scope, Image Swap, Image
                              <u>Title</u>, VRM Interval, Sona-tone, NAV Start, Image Recall,
                              Frequency, Event Key Usage, Key Lock, Depth Unit, Color
                              Tone, B.D. Mode)
9. [F2] key
                             (Shift Digit Input, IR, Color Erase, Noise Reduction, Background
                              Color, TVG Adjust, White Line, A Scope, Image Swap, Image
                              Title, VRM Interval, Sona-tone, NAV Start, Image Recall,
                              Frequency, Event Key Usage, Key Lock, Depth Unit, Color
                              Tone, B.D. Mode)
10. [Image speed/NAV] key

    Image speed

                            (Speed -2, Speed -1, Speed 0, Speed 1, Stop, Speed 2 (1/1),
                              Speed 3, Speed 4, Speed 5, Speed 6, Speed 7, Speed 8,
                              Speed 9)

    NAV screen display (<u>OFF</u>, NAV 1 screen, NAV 2 screen)
```

x 0093101114-03

CVS-FX1 Menu List

11. [MENU] key

```
-Echo Adjust⊤
               —IR (OFF, Low, High)
                  Color Erase (0 ~ 50 %, 0 %)

    Noise Reduction (0~10: 0)

                - TX Power (HF) (20, 30, 40, 50, 60, 70, 80, 90, 100, Auto)
                 TX Power (LF) (20, 30, 40, 50, 60, 70, 80, 90, 100, Auto)

    Dynamic Range HF1 (12 ~ 30 dB: 24 dB)

    Dynamic Range HF2 (12 ~ 30 dB: 24 dB)

    Dynamic Range LF1 (12 ~ 30 dB: 24 dB)

    Dynamic Range LF2 (12 ~ 30 dB: 24 dB)

    Background Color (Pale Blue, Marine Blue, Blue, Dark Blue, Black,

                                      Pale Green Blue, Green Blue, Dark Green Blue, White,
                                      Night Mode)

    Color Tone (Monochrome, 8 color, 16 color, <u>64 color</u>)

                  TVG Type (Manual, Optimized)
-TVG
                  TVG Strength HF1 (1 ~ 50: 25)
                   TVG Depth HF1 (2 ~ 1000 m: 50 m, 6 ~ 3300 ft, 1 ~ 550 fm, 1 ~ 610 l.fm,
                                     1 \sim 660 \text{ J.fm}
                  TVG Adjust HF1 (2 ~ 30m: 2 m, 6 ~ 100 ft, 1 ~ 16 fm, 1 ~ 18 l.fm,
                                     1 \sim 20 \text{ J.fm}
                  TVG Strength HF2 (1 ~ 50: 25)
                  TVG Depth HF2 (2 ~ 1000m: <u>50 m</u>, 6 ~ 3300 ft, 1 ~ 550 fm, 1 ~ 610 l.fm,
                                     1 \sim 660 \text{ J.fm}
                  TVG Adjust HF2 (2 ~ 30 m: 2 m, 6 ~ 100 ft, 1 ~ 16 fm, 1 ~ 18 l.fm,
                                     1 \sim 20 \text{ J.fm}
                  TVG Strength LF1 (1 ~ 50: 25)

    TVG Depth LF1 (2 ~ 1000 m: 50 m, 6 ~ 3300 ft, 1 ~ 550 fm, 1 ~ 610 l.fm,

                                     1 \sim 660 \text{ J.fm}
                  TVG Adjust LF1 (2 ~ 30 m: 2 m, 6 ~ 100 ft, 1 ~ 16 fm, 1 ~ 18 l.fm,
                                     1 \sim 20 \text{ J.fm}
                   TVG Strength LF2 (1 ~ 50: 25)
                   TVG Depth LF2 (2 ~ 1000 m,: 50 m, 6 ~ 3300 ft, 1 ~ 550 fm, 1 ~ 610 l.fm,
                                     1 \sim 660 \text{ J.fm}
                  TVG Adjust LF2 (2 ~ 30 m,: 2 \text{ m}, 6 ~ 100 ft, 1 ~ 16 fm, 1 ~ 18 l.fm,
                                     1 \sim 20 \text{ J.fm}
 Disp. Setup1— A Scope (OFF, ON)
                   White Line (OFF, 1, 2, 3, 4, 5, Auto)
                   Mix (A, B, C, D, Fish School Size)
                  - Image Direction (\leftarrow |\leftarrow, \rightarrow |\rightarrow, \leftarrow |\rightarrow)
                  - Image Swap (AIB, BIA)

    Image Split (<u>Vertical</u>, Horizontal)

    Width of Zoom Image (Wide, Medium, Narrow)

                    Zoom Image Split (Standard, Vertical)
                    Sub depth Value (OFF, m, fm, I.fm, ft, J.fm)
```

0093101114-03 xi

Menu List CVS-FX1

```
Disp. Setup2— Scale (OFF, ON)
                      Scale Position (Side, Center)
                     Scale Value (Small, Medium, Large)
                      Color Bar Scale (OFF, ON)
                     Image Title (Frequency, HF1 LF1)
                      Water Temp Window (OFF, 5 minutes, 10 minutes, 15 minutes, 30
                                                minutes, 60 minutes)
                     - W. Temp. Graph Range (2 °C, <u>5 °C,</u> 10 °C)
                     Depth Font Size (OFF, Small, Medium, Large)

    Depth Position (<u>Bottom</u>, Top)

                     W. Temp. Font Size (OFF, Small, Medium, Large)
                     Speed Value (OFF, ON)
                     Detection Area (OFF, ON)
                       VRM Interval (0.0 ~ 100.0 m: 0.0 m, 0.0 ~ 330.0 ft: 0.0 ft)

    VRM Image (<u>Active Screen</u>, All screens)

    Range Setup — Range Operation (<u>All screens same</u>, Scr. Individual)

    Range 1 (1.0 ~ 3000 m 85 steps: <u>5 m</u>)

    Range 2 (1.0 ~ 3000 m 85 steps: <u>10 m</u>)

    Range 3 (1.0 ~ 3000 m 85 steps: <u>20 m</u>)

    Range 4 (1.0 ~ 3000 m 85 steps: 50 m)

                      Range 5 (1.0 ~ 3000 m 85 steps: 100 m)
                       Range 6 (1.0 ~ 3000 m 85 steps: 150 m)
                       Range 7 (1.0 ~ 3000 m 85 steps: 300 m)
                     Range 8 (1.0 ~ 3000 m 85 steps: 500 m)
                       Shift Operation (All screens same, Scr. Individual)
   Shift Setup -

    Shift Type (<u>Numerical Value</u>, Range Dependant, Preset Value,

                                   Range Ratio)
                       Shift Preset 1 (0 ~ 1000 m: 10 m, 0 ~ 3300 ft)
                       Shift Preset 2 (0 ~ 1000 m: 20 m, 0 ~ 3300 ft)
                       Shift Preset 3 (0 ~ 1000 m: <u>30 m</u>, 0 ~ 3300 ft)

    Shift Preset 4 (0 ~ 1000 m: 40 m, 0 ~ 3300 ft)

    Shift Preset 5 (0 ~ 1000 m: <u>50 m</u>, 0 ~ 3300 ft)

    Shift Preset 6 (0 ~ 1000 m: 60 m, 0 ~ 3300 ft)

    Shift Preset 7 (0 ~ 1000 m: <u>70 m</u>, 0 ~ 3300 ft)

                       Shift Preset 8 (0 ~ 1000 m: 80 m, 0 ~ 3300 ft)

    Zoom Shift Position (0 ~ 3000 m: 0 m, 0 ~ 8000 ft)

                    —Bottom Search Range (Inside Range, Outside Range)
    BTM Search—


    Sounding Source (<u>Auto Select</u>, High1, High2, Low1, Low2)

    Sounding Limit (100~ 4000 m,: 4000 m, 330 ~ 13000 ft: 12000 ft)

В
```

xii 0093101114-03


CVS-FX1 Menu List

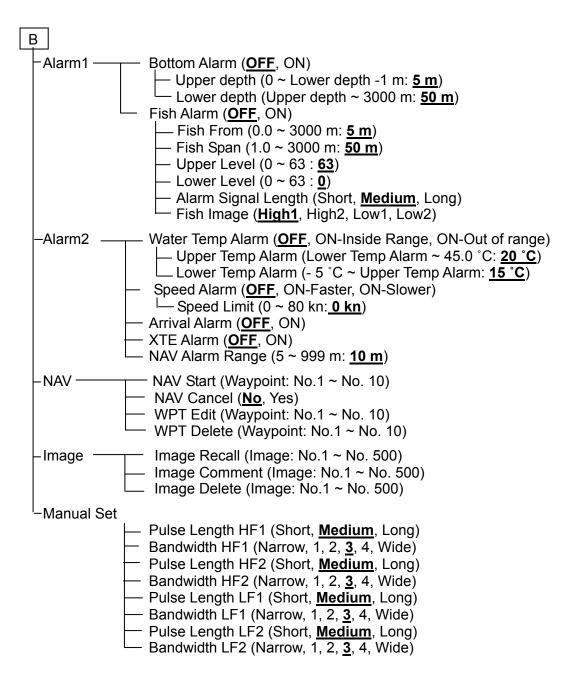

0093101114-03 xiii

Menu List CVS-FX1

12. [SUB MENU] key

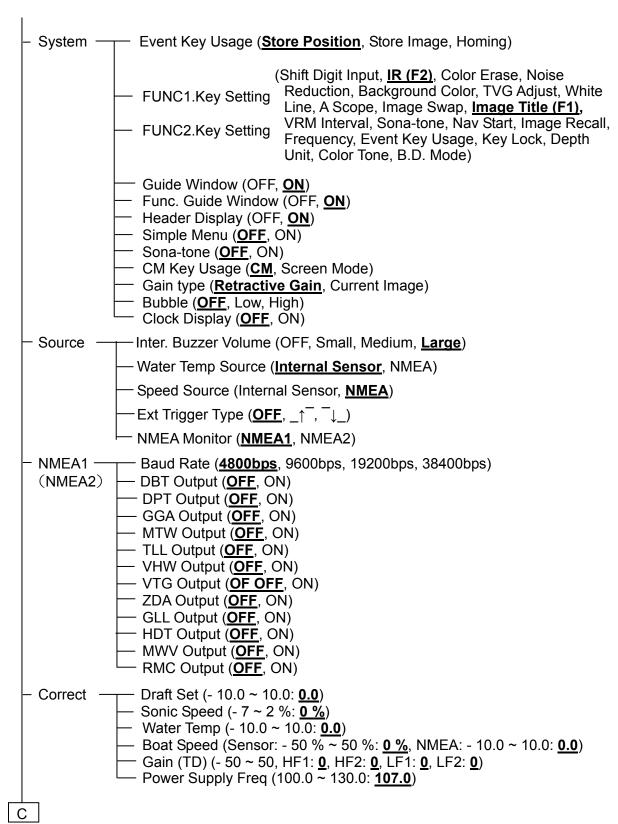

xiv 0093101114-03

CVS-FX1 Menu List

```
С
   Heaving — Heaving (OFF, ON)
                – HF TD Back and Forth (- 100.0 ∼ 100.0: 0.0)

    HF TD Right and Left (- 100.0 ~ 100.0: 0.0)

                 THF TD Height (- 100.0 ~ 100.0: 0.0)
                 - LF TD Back and Forth (- 100.0 ~ 100.0: 0.0)
                 LF TD Right and Left (- 100.0 ~ 100.0: 0.0)
                 - LF TD Height (- 100.0 ~ 100.0: 0.0)
  \overline{\phantom{a}} TD Setting\overline{\phantom{a}} HF TD Type (OFF,
                                Broadband type: TDM-052, TDM-062, TDM-083
                                Others: TDM-041, Others, TDM-041D, Others1)

    LF TD Type (same as above)

    HF TD1 Setting (Frequency: 24.0 ~ 240.0 kHz: 200 kHz,

                                    Beam Angle: 1 ~ 120 °: 7°)

    HF TD2 Setting (Frequency: 24.0 ~ 240.0 kHz: <u>130 kHz</u>,

                                    Beam Angle: 1 ~ 120 °: 11°)
                  LF TD1 Setting (Frequency: 24.0 ~ 240.0 kHz: 75 kHz,
                                    Beam Angle: 1 ~ 120 °: 10°)
                  LF TD2 Setting (Frequency: 24.0 ~ 240.0 kHz: 38 kHz,
                                    Beam Angle: 1 ~ 120 °: 20°)
                  Bottom Limit HF (1.0 ~ 3.0 m: 1.0 m)
                  Bottom Limit LF (1.0 ~ 3.0 m: 1.0 m)
   Basics -
                 - Language (English, Japanese, Greek, Spanish, Italian, French, Korean,
                                Thai, Chinese1, Chinese2)
                  Range&Speed Unit (NM,kn, km,km/h, sm,mph)
                  Depth Unit (m, fm, I.fm, ft, J.fm)
                  Temperature Unit ( °C, °F)
                  Localtime Offset (- 12.0 ~ 14.0: 0.0)
                                    (Note: Default value is 9.0, when Japanese language is selected
                                        upon initial startup.)
                  GPS Select (Others, Koden GPS, V102, VectorG1)
                  GPS Initialize (NO, yes)

    Customize —

    Color Customize (<u>Depth Value Font</u>, Depth Value Edge, Fish Alarm bar,


                                    Bottom Alarm Bar, Zoom Range Bar, Scale Inside, Scale
                                    Edge, Scale Val Inside, Scale Value Edge, Graph Line,
                                    VRM Line, VRM Value Font, VRM Value Edge, VRM Inter.
                                    Line, VRM Int Val Font, VRM Int Val Edge, W.temp Val
                                    Font, W.Temp Val Edge, Speed Value Font, Speed Value
                                    Edge, Header Display)
                   Color Divide (0 ~ 99, Red: 90, Orange: 78, Yellow: 66, Green: 53, Blue
                                  Green: 39, Light Blue: 25, Blue: 12)

    Fish Disp Col. Adj. (0 ~ 30: 0)

                  – B. D. Mode (OFF, <u>1</u>, 2, 3)
D
```

0093101114-03 XV

Menu List CVS-FX1

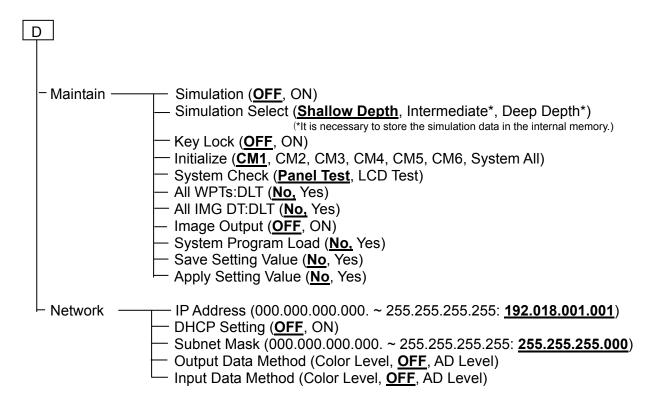

xvi 0093101114-03

Chapter 1 Echo Adjust/ **Display Setup**

1.1 Change of TX Power

The strength of TX Power (transmission output) can be changed.

When water depth is 50 m or less, the gain of images are sometimes too high. In such cases, the gain can be set appropriately by reducing the [TX Power]. When own equipment is affecting the echo sounders of other boats, the interference noise to the other boats can be reduced by weakening the TX Power.


1.1.1 TX Power (HF)

Echo Adjust - TX Power (HF)

When TX Power (HF) has been changed, the TX Power of the transducer connected to the HF (high frequency) side can be adjusted.

- 1. Press MENU
- Select [Echo Adjust] [TX Power (HF)].
- 3. Press [▶] of (

The setup box of [TX Power (HF)] will be displayed.

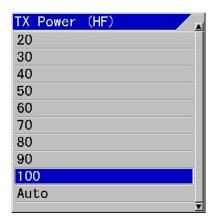

Press [▲] and [▼] and select TX Power.

The smaller the value is, the weaker the TX Power becomes.

5. Press



to close the menu.



Caution: At [Auto], transmission output will be adjusted depending of depth range. The output is reduced for shallow water, and is increased for deep water

1.1.2 TX Power (LF)

Echo Adjust - TX Power (LF)

When TX Power (LF) is changed, the TX Power of transducer connected to the LF (low frequency) side can be adjusted.

- 1. Press MENU
- 2. Select [Echo Adjust] [TX Power (LF)].
- 3. Press [▶] of

The setup box of [TX Power (LF)] will be displayed.

4. Press [▲] and [▼], and select TX Power.

The smaller the value is, the weaker the TX Power becomes.

5. Press MENU to close the menu.



Caution: At [Auto], transmission output will be adjusted depending of depth range. The output is reduced for shallow water, and is increased for deep water.

Proof Caution: Never activate transmission while transducer is out of water.

1-1 0093101114-03


1.2 Change of dynamic range of Echo

Echo Adjust - Dynamic Range*1 HF1, HF2, LF1, LF2

The dynamic range of reflected signal (color gradation) can be adjusted.

- 1. Press MENU
- Select [Echo Adjust] [Dynamic Range XXX].
- 3. Press [▶] of

The setup box of [Dynamic Range XXX] will be displayed.

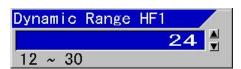

4. Press [▲] and [▼] and select a value.

When the value is small, the expression range of strong and weak signal change is narrow, weaker signal will become undistinguished. When the value is larger, the expression range is wider and the weaker signals become distinct.

5. Press MENU to close the menu.

1.3 Making of reflection strength at shallow and deep depth equal

At [Optimized] of TVG Type, it is set as the bottom signal can be seen at a constant level. At [Manual], the reflection strength of fish depending on the depth can be set to be seen uniformly.

Main changing items here are as follows:

- To change TVG Type
- To change TVG Strength
- To change TVG Depth


1.3.1 Changing of TVG Type

TVG*2 - TVG Type

TVG is a function to display images, by correcting the attenuation of ultrasonic sound through propagation in water and by making reflection strength from deeper and shallower depth equal,

- 1. Press MENU
- 2. Select [TVG] [TVG Type]
- 3. Press [▶] of

The setup box of [TVG Type] will be displayed.

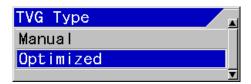

4. Press [▲] and [▼] to select a type.

At [Optimized], bottom signal will be corrected to be a constant level at all ranges. At the [TVG Adjust], it is possible to change the effect of correction on signal shallower than the start point.

At [Manual], user is to set [TVG Strength], [TVG Depth] and [TVG Adjust] to produce desired performance. (See the Basic Operation Manual, "2.2.6 Adjustment of TVG").

How to adjust TVG:

- Setup a gradient of gain variation at [TVG Strength].
- Setup a reference depth for correction at [TVG Depth].
- Setup a start depth for correction at [TVG Adjust].
- 5. Press MENU to close the menu.

1-2 0093101114-03

^{*1} Dynamic Range: This is the function to expand and narrow down the signal range from blue to red in images.

^{*2} TVG (Time variable gain): The signal strength is different between deep and shallow water and this is the function to correct this.

1.3.2 Changing of TVG Strength

TVG - TVG Strength HF1, HF2, LF1, LF2

The gradient of gain variation is adjusted to reduce gain for shallower depth.

1. Press MENU

2. Select [TVG] - [TVG Strength XX].

3. Press [▶] of

The setup box of [TVG Strength XX] will be displayed.



4. Press [▲] and [▼] and set a value.

When the value is larger, the gradient will be steeper (gain variation amount is large) and when the value is smaller, the gradient will be gentler (gain variation amount is small).

5. Press MENU to close the menu.

Caution: When [Manual] is selected for [TVG Type], setup shall be done to every frequency.

1.3.3 Changing of TVG Depth

TVG - TVG Depth HF1, HF2, LF1, LF2

The reference depth for correction will be adjusted.


The reflected signal from depth shallower this reference depth will be corrected to be the same gain of the reference depth.

1. Press MENU

2. Select [TVG] - [TVG Depth XX].

3. Press [▶] of .


The setup box of [TVG Depth XX] will be displayed.

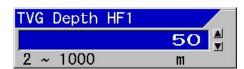

Press [▲] and [▼] to set a value for depth.

When the value is larger, the correction reference depth becomes deeper and the gain at shallower depth will be reduced when smaller.

5. Press MENU to close the menu.

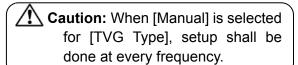


1.3.4 Changing of TVG Adjust

TVG - TVG Adjust HF1, HF2, LF1, LF2


When correction is too much effective at shallower depth, the correction start depth will be adjusted. The correction amount at depth shallower than the start depth will be the same as that of the start depth.

1. Press MENU

2. Select [TVG] - [TVG Adjust XX[.

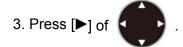

The setup box of [TVG Adjust XX] will be displayed.

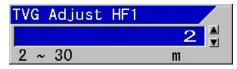


4. Press [▲] and [▼] to set a value for depth.

When the value is larger, the correction start depth will become deeper and the gain at shallower depth will increase.

0093101114-03

When the value is larger, the correction reference depth becomes deeper and the gain at shallower depth will be reduced when smaller.

5. Press MENU to close the menu.

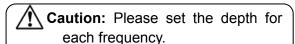


1.4 Displaying of A Scope

Disp. Setup1 - A Scope

A scope expresses the echo strength of fish image from one set of the latest transmitted/received signal as width, to provide better view by displaying stronger response wide and weaker response narrow.


A Scope will be displayed next to the location of display of the latest image in the direction of scroll of echo sounder's images.

Example of display:

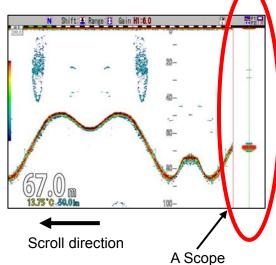

- 1. Press MENU
- 2. Select [Disp. Setup1] [A Scope]
- 3. Press [▶] of

The setup box of [A Scope] will be displayed.

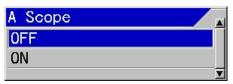


- Press [▲] and [▼], and select [ON] to display and [OFF] to close.
- 5. Press MENU to close the menu.

1.5 Display in of white line

Disp. Setup1- White Line

The surface of sea bottom is marked with a white line of constant width to make the fish school at the bottom easily identified.

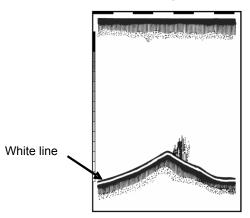

- 1. Press MENU
- 2. Select [Disp. Setup1] [White Line].
- 3. Press [▶] of

The setup box of [White Line] will be displayed.




1-4 0093101114-03

- 4. Press [▲] and [▼] and select the line width of white line. At 1, the finest line will be displayed and at 5, the thickest line will be displayed. At [Auto], the width of white line will vary depending on the strength of reflection from sea bottom. To stop the display, select [OFF].
- 5. Press MENU to close the menu.

1.6 Changing of screen

The screen can be changed to be easily seen depending on environmental conditions of the usage.

Layout of images

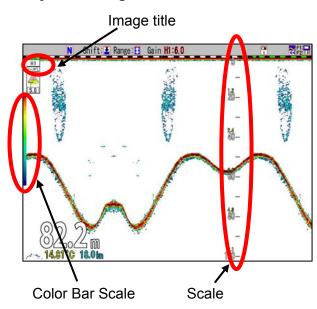


1.6.1 Changing of Background Color of images of echo sounders

Echo Adjust - Background Color

Responding to the ambient brightness, the background color of display can be changed.

- 1. Press MENU
- 2. Select [Echo Adjust] [Background Color].
- 3. Press [▶] of

The setup box of [Background Color] will be displayed.

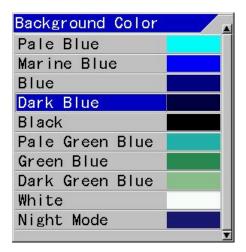

4. Press [▲] and [▼] to select Background Color.

When night mode is selected, background color will be in darker color and display brightness is also turned down simultaneously.

Caution: The screen brightness in night mode can be set at different brightness from the other background color. As for the change of screen brightness, refer to the Basic Operation Manual, "1.6.1 Adjustment of LCD brilliance".

5. Press MENU to close the menu.

1.6.2 Changing of display color of echo sounder images

Echo Adjust - Color Tone

The color tone of images on echo sounders can be changed.

Either one of [Monochrome], [8 color], [16 color] and [64 color] can be selected.

- 1. Press MENU
- 2. Select [Echo Adjust] [Color Tone].
- 3. Press [▶] of .

0093101114-03 1-5

The setup box of [Color Tone] will be displayed.



- Press [▲] and [▼] to set the color tone to which changed. In accordance with the setup, the Color Bar Scale will be also changed.
- 5. Press MENU to close the menu.


1.6.3 To display of Scale/Not to display

Disp. Setup2 - Scale

It is selectable to display scale or not.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Scale].

The setup box of [Scale] will be displayed.

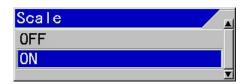

- 4. With [▲] and [▼], select [ON] to display and [OFF] not to display.
- 5. Press MENU to close the menu.

1.6.4 Changing of Scale Position

Disp. Setup2 - Scale Position

The display of Scale Position can be selected.

- 1. Press MENU .
- 2. Select [Disp. Setup2] [Scale Position].

3. Press [▶] of



The setup box of [Scale Position] will be displayed.



- 4. With [▲] and [▼] keys, select [Side] or [Center] of the position of display.
- 5. Press MENU to close the menu.

1.6.5 Changing of Scale Value

Disp. Setup2 - Scale Value

The display of Scale Value can be changed.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Scale Value].
- 3. Press [▶] of .

The setup box of [Scale Value] will be displayed.



- 4. Select [Small], [Medium] or [Large] of the size with [▲] and [▼].
- 5. Press MENU to close the menu.

1.6.6 Displaying of Color Bar Scale

Disp. Setup2 - Color Bar Scale

It is selectable to display Color Bar Scale or not.


- 1. Press MENU
- Select [Disp. Setup 2] [Color Bar Scale].

1-6 0093101114-03

3. Press [▶] of



The setup box of [Color Bar Scale] will be displayed.

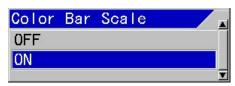

- With [▲] and [▼], select [ON] to display and [OFF] not to display.
- 5. Press MENU to close the menu.

1.6.7 Set the Image Title as frequency/ HFX LFX

Disp. Setup2 - Image Title

The title of each image can be selected.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Image Title].
- 3. Press [▶] of

The setup box of [Image Title] will be displayed.



- 4. With [▲] and [▼], select either one of [Frequency] or [HF1 LF1].
- 5. Press MENU to close the menu.

Example of display:



Simple indication of frequency.

200.0

Indication of the actual frequency in use.

1.6.8 Changing of Image Direction

Disp. Setup1 - Image Direction


The scroll direction of displayed images can be changed.

- 1. Press MENU .
- 2. Select [Disp. Setup1] [Image Direction].
- 3. Press [▶] of

The setup box of [Image Direction] will be displayed.



- 4. With [▲] and [▼] keys, select one of the direction [←|←], [→|→] or [←|→].
- 5. Press MENU to close the menu.

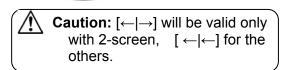

1.6.9 Changing of display alignment of images

Disp. Setup1 - Image Swap

The alignment of image display on echo sounder can be changed.

- 1. Press MENU .
- 2. Select [Disp. Setup1] [Image Swap].

The setup box of [Image Swap] will be displayed.



0093101114-03

4. With [▲] and [▼] keys, select swapping type [A|B] or [B|A].

When [A|B] is selected, the alignment of images will be HF1, HF2, LF1 and LF2 from the right side. When [B|A] is selected, the alignment will be HF1, HF2, LF1, and LF2 from the left side.

5. Press MENU to close the menu.

1.6.10 Detailed display of image resolution and lapse time

Disp. Setup1 - Image Split

When more than one image is displayed on the screen, the arrangement of images can be selected.

- 1. Press MENU
- 2. Select [Disp. Setup1] [Image Split].
- 3. Press [▶] of

The setup box of [Image Split] will be displayed.




4. Pressing [▲] and [▼], select screen split [Vertical] or [Horizontal].


At [Vertical], the screen will be divided into the right and the left parts. This will be selected to put much emphasis in the depth direction. At [Horizontal], the screen will be divided into two portions, upper and lower. This will be selected to put much emphasis on lapse time.

5. Press MENU to close the menu.

Example of display:

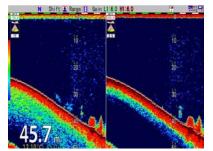

Display of vertical split of the screen

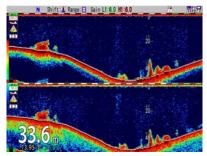

Display of horizontal split of the screen

1.6.11 Changing of Width of Zoom Image

Disp. Setup1 - Width of Zoom Image


When zoomed images are displayed on the screen of echo sounders, the width of zoom image can be changed.



Caution: To display zoomed images, refer to the Basic Operation Manual, "2.1.3 Displaying of zoom images".

- 1. Press MENU
- Select [Disp. Setup1] [Width of Zoom Image]
- 3. Press [▶] of

The setup box of [Width of Zoom Image] will be displayed.

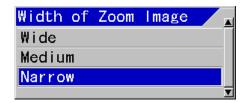

1-8 0093101114-03

- 4. With [▲] and [▼] keys, select one of the widths of zoomed display image, [Wide], [Medium] or [Narrow].
- 5. Press MENU to close the menu.

1.6.12 Zoom Image Split

Disp. Setup1 - Zoom Image Split

When one or two normal images are displayed on the screen, the zoom image can be displayed next to the normal image.

- 1. Press MENU .
- 2. Select [Disp. Setup1] [Zoom Image Split]
- 3. Press [▶] of

The setup box of [Zoom Image Split] will be displayed.




- 4. Pressing [▲] and [▼], select zoom screen split [Standard] or [Vertical].
- 5. At [Standard], the screen will be divided into upper and lower parts. This will be selected to put much emphasis on lapse

At [Vertical], the screen will be divided into the right and left parts. This will be selected to put much emphasis in the depth direction.

6. Press MENU to close the menu.

Example of display:

In case of two normal images are selected

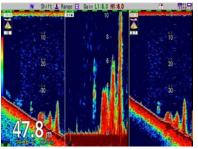


LF1-Normal HF1-Zoom HF1-Normal

When three or four normal images are displayed on the screen, the zoom image cannot be displayed next to the normal image.

In this case, the zoom image is displayed below the normal image.


In case of three normal images are selected

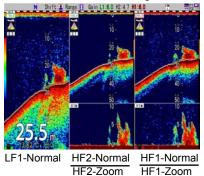

1.7 Displaying of Water Temp Window

The contents for displaying Water Temp Window are as follow:

- Display of Water Temp Window /Not to display
- Change of W.Temp.Graph Range

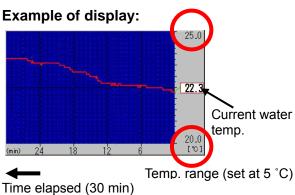

1-9 0093101114-03


1.7.1 Display of Water Temp Window/Not to display

Disp. Setup2 - Water Temp Window

The latest water temperature and the transition of water temperature in the past can be displayed in a graph.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Water Temp Window].
- 3. Press [▶] of

The setup box of [Water Temp Window] will be displayed.

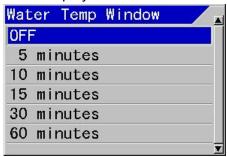

- With [▲] and [▼] keys, select display period of the graph from [5 minutes], [10 minutes], [15 minutes], [30 minutes] and [60 minutes]. To stop the display, select [OFF].
- 5. Press MENU to close the menu.


1.7.2 Changing of W.Temp. Graph Range

Disp. Setup2 - W. Temp. Graph Range


The display width of W. Temp. Graph Range can be selected.

- 1. Press MENU
- Select [Disp. Setup2] [W. Temp. Graph Range]
- 3. Press [▶] of

The setup box of [W. Temp. Graph Range] will be displayed.

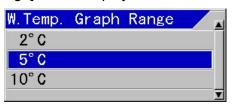

- With [▲] and [▼] keys, select water temperature range, [2 °C], [5 °C] or [10 °C].
- 5. Press MENU to close the menu.

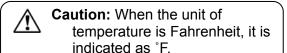

1.8 Changing of Depth Font Size and Depth Position/Display of Sub Depth Value

The contents for changes of display of water depth are as follows:

- · Change of Depth Font Size
- Change of Depth Position
- Depth value can be displayed with the selected depth unit independently in addition to the Main depth value

1.8.1 Changing of Depth Font Size


Disp. Setup 2 - Depth Font Size

The size of characters for water depth can be changed.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Depth Font Size]
- 3. Press [▶] of

1-10 0093101114-03

The setup box of [Depth Font Size] will be displayed.

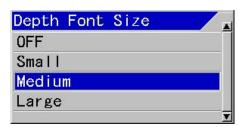

- With [▲] and [▼] keys, select one of Depth Font Size, [Small], [Medium] or [Large]. To stop the display, select [OFF].
- 5. Press MENU to close the menu.

1.8.2 Changing of display position of depth

Disp. Setup2 - Depth Position

The display position of water depth can be selected.


- 1. Press MENU .
- 2. Select [Disp. Setup2] [Depth Position]
- 3. Press of [▶] of


The setup box of [Depth Position] will be displayed.



- 4. With [▲] and [▼] keys, select Depth Position, [Bottom] or [Top].
- 5. Press MENU to close the menu.

Example of display:

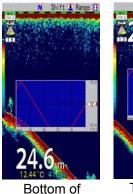

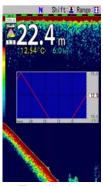

Bottom of display

Top display position


1.8.3 Display of Sub Depth Value

Disp. Setup1 - Sub Depth Value

Depth value can be displayed with the selected depth unit independently in addition to the Main depth value.

- 1. Press MENU .
- 2. Select [Disp. Setup1] [Sub Depth Value]
- 3. Press of [▶] of

The setup box of [Sub Depth Value] will be displayed.

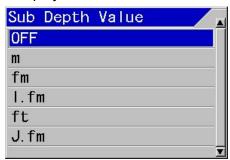

- 4. With [▲] and [▼] keys, select one of Sub Depth Value, [m], [fm], [l.fm], [ft] or [J.fm]. To stop the display, select [OFF].
- 5. Press MENU to close the menu.

1.9 Changing of W.Temp. Font size


Disp. Setup2 - W.Temp. Font size

Font size of the water temperature display can be selected.

0093101114-03


- 1. Press
- MENU
- 2. Select [Disp. Setup2] [W.Temp. Font size].
- 3. Press [▶] of

The setup box of [W.Temp. Font size] display will be displayed.

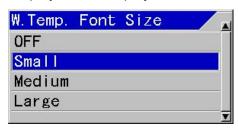

- 4. With [▲] and [▼] keys, select W.Temp. Font size, [Small], [Medium] or [Large]. To stop the display, select [OFF].
- 5. Press MENU to close the menu.

Example of display:

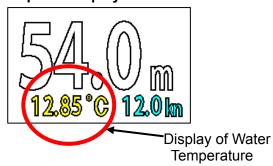

1.10 Displaying of Speed Value/Not to display

Disp. Setup2 - Speed Value

It is selectable to display the boat speed or not.


- 1. Press MENU
- 2. Select [Disp. Setup2] [Speed value].
- 3. Press [▶] of

The setup box of [Speed value] will be displayed.



- 4. With [▲] and [▼] keys, select [ON] to display and [OFF] to stop.
- 5. Press MENU to close the menu.

Example of display:

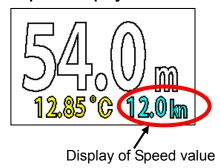

1.11 Display of Detection Area/Not to display

Disp. Setup2 - Detection Area

Approximate detection area by the beam angle of the transducer in use will be displayed.

- 1. Press MENU
- 2. Select [Disp. Setup2] [Detection Area].
- 3. Press [▶] of

The setup box of display of [Detection Area] will be displayed.




- With [▲] and [▼] keys, select [ON] to display and [OFF] not to display.
- 5. Press MENU to close the menu.

1-12 0093101114-03

 $\widehat{\mathbb{A}}$

Caution: When a transducer other than broadband type*¹ is used, the beam angle differs by transducer. Set the beam angle of the transducer to be used at [TD setting] → [HF TD setting] → [Beam Angle] and [LF TD setting] → [Beam Angle]

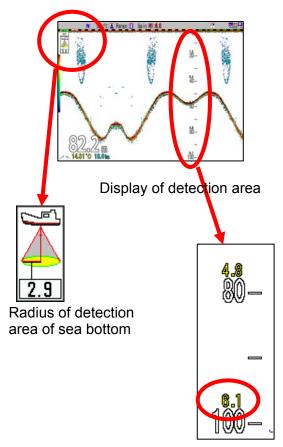

Radius of detection area of scale (The value in yellow at upper part of scale values)

1.12 Widening of Bottom Search Range

BTM Search - Bottom Search Range

This is to select the bottom search range.

- 1. Press MENU
- 2. Select [BTM Search] [Bottom Search Range]
- 3. Press [▶] of



The setup box of [Bottom Search Range] will be displayed.



 With [▲] and [▼] keys, select [Bottom Search Range], [Inside Range] or [Outside Range].

At [Inside Range], sea bottom is detected if sea bottom is displayed in the screen.

At [Outside Range], sea bottom will be detected down to the depth twice as deep as display range.

5. Press MENU to close the menu.

1.13 Selection of a Sounding Source (frequency)

BTM Search - Sounding Source


The bottom detection source is selected either in a specified image or auto select.

- 1. Press MENU
- 2. Select [BTM Search] [Sounding Source].

0093101114-03

^{*&}lt;sup>1</sup>Broaband Type Transducer: A transducer that can handle multiple frequencies (having wide range of frequency bandwidth). TDM-052, TDM-062 can be connected to CVS-FX1.

The setup box of [Sounding Source] will be displayed.

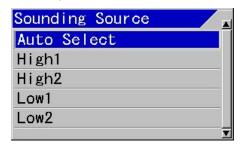

4. With [▲] and [▼] keys, select one of [High1], [High2]*1, [Low1] or [Low2]*2. For automatic selection, select [Auto Select].

At [Auto Select], the image with the highest frequency of bottom detected will be selected.

5. Press MENU to close the menu.

Caution: When an image is specified and bottom cannot be detected in the image, water depth will not be displayed.

1.14 Setting depth to perform Bottom Limit searching at Auto-Range / Auto-Shift

BTM Search - Sounding Limit

When the sea bottom cannot be detected at Auto-Range*3/Auto-Shift*4, the maximum depth to detect the bottom shall be set.

- 1. Press MENU
- 2. Select [BTM Search] [Sounding Limit].
- 3. Press [▶] of

The setup box of [Sounding Limit] will be displayed.



4. Pressing $[\blacktriangle]$, $[\blacktriangledown]$, $[\blacktriangleright]$ or $[\blacktriangleleft]$, set a depth.

Larger value makes the time longer for detecting the sea bottom again after lost due to bubble etc..

5. Press MENU to close the menu.

1.15 Selecting method for Shift Operation (per each image/for whole screen at the same time)

Shift Setup - Shift Operation

It can be selected whether the shift operation is changed for all images at once or for each image.

- 1. Press MENU .
- 2. Select [Shift Setup] [Shift Operation].
- 3. Press [▶] of

The setup box of [Shift Operation] will be displayed.



- When shift on all images will be changed at once with [▲] and [▼] keys, select [All Screens same]. When each image is changed, select [Scr. Individual].
- 5. Press MENU to close the menu.



Caution: When [Scr. Individual] is selected, the shift on the image, on which a red gain knob mark is blinking (active image), will be valid and changeable. To specify an image, push the gain knob and switch over to the active image.

1-14 0093101114-03

^{*1}High1/High2: Names of two images where the higher frequencies (H) in 4-frequency can be selected.

^{*&}lt;sup>2</sup>Low1/Low2: Names of two images at those the lower frequencies (H) in 4-frequency can be selected.

^{*3}Auto Range: The function to change the range automatically to keep the sea bottom always in the image.

^{*4}Auto Shift : The function to change the shift automatically to keep the sea bottom always in the image.

1.16 Selecting Range Operation (per image/Whole screen at same time)

Range Setup - Range Operation

It can be selected whether the range operation is changed for all images at once or for each image.

- 1. Press MENU
- 2. Select [Range Setup] [Range Operation].
- 3. Press [▶] of

The setup box of [Range Operation] will be displayed.



- 4. When range on all images will be changed at once with [▲] and [▼] keys, select [All Screens same]. When each image is changed, select [Scr. Individual].
- 5. Press MENU to close the menu.



Caution: When [Scr. Individual] is selected, the shift on the image, on which a red gain knob mark is blinking (active image), will be valid and changeable. To specify an image, push the gain knob and switch over to the active image.

0093101114-03 1-15 CVS-FX1 Chapter 2 Alarm

Chapter 2 Alarm

2.1 Use of Bottom Alarm

When the detected position of sea bottom is shallower than the upper limit or deeper than the lower limit, alarm sound and display will be provided.

It is convenient for maintaining a specific depth.

The content to use Bottom Alarm is as follows:

- Start/Stop the Bottom Alarm
- Set the Upper Depth for Bottom Alarm
- Set the Lower Depth for Bottom Alarm

2.1.1 Start/Stop of Bottom Alarm

Alarm1 - Bottom Alarm

Select [ON] for bottom alarm and [OFF] not for bottom alarm.

1. Press MENU

2. Select [Alarm1] - [Bottom Alarm].

3. Press [▶] of

The setup box of [Bottom Alarm] will be displayed.



- 4. Press [▲] and [▼] keys, and select [ON] to activate the alarm, [OFF] to stop.
- 5. To set Bottom Alarm related items subsequently:
 - (1) Go to item 2 of 2.1.2, when [Upper Depth] is to be set.
 - (2) Go to item 2 of 2.1.3 when [Lower Depth] is to be set.

6. Press MENU to close the menu.

Caution: Press any key stop any alarm sound an alarm display..

Caution: To activate the alarm sound and the alarm display again after once stopped, it is necessary for the boat to go outside of the alarm conditions.

Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)

2.1.2 Setup of Upper Depth

Alarm1 - Upper Depth


To set the depth to activate alarm when depth becomes shallower than the specified depth.

1. Press MENU .


2. Select [Alarm1] - [Upper Depth].

3. Press [▶] of

The setup box of [Upper Depth] will be displayed

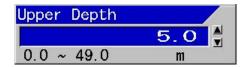

- 4. Pressing [▲] and [▼] keys, set Upper Depth.
- 5. To set [Lower Depth] subsequently, go to 2.1.3 of item 2.
- 6. Press MENU to close the menu.

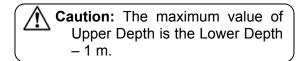

0093101114-03 2-1

Chapter 2 Alarm CVS-FX1


2.1.3 Setup of Lower Depth

Alarm1 - Lower Depth


To set the depth, where to activate alarm when the depth becomes deeper than a specified depth, will be set.

- 1. Press MENU
- 2. Select [Alarm1] [Lower Depth].
- 3. Press [▶] of

The setup box of [Lower Depth] will be displayed.

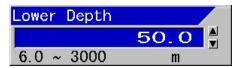

- Pressing [▲] and [▼] keys, set Lower Depth.
- 5. Press MENU to close the menu.

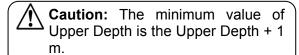

2.2 Use of Fish Alarm

When there is response recognized as fish school within a set area, notice will be provided with sound and display.

It is convenient to judge if there is response of fish school.

The contents to use this Fish Alarm are as follows:

- Start/Stop the Fish Alarm
- Set the Fish From
- Set the Fish Span
- Set the Upper Level
- Set the Lower Level
- Set the Alarm Signal Length
- Set the Fish Image

2.2.1 Start/Stop Fish Alarm

Alarm1 - Fish Alarm


Select [ON] to enable the fish alarm and [OFF] to deactivate.


- 1. Press MENU
- 2. Select [Alarm1] [Fish Alarm]
- 3. Press [▶] of

The setup box of [Fish Alarm] will be displayed.



- 4. Press [▲] and [▼] keys, select [ON] to enable the alarm and [OFF] to delete it.
- 5. Consecutively, to set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.2, when [Fish From] is set.
 - (2) Go to item 2 of 2.2.3, when [Fish Span] is set.
 - (3) Go to item 2 of 2.2.4, when [Upper Level] is set.
 - (4) Go to item 2 of 2.2.5, when [Lower Level] is set.
 - (5) Go to item 2 of 2.2.6, when [Alarm Signal Length] is set.
 - (6) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.

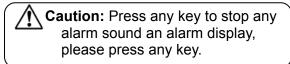

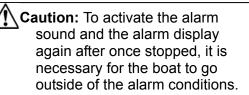

2-2 0093101114-03

CVS-FX1 Chapter 2 Alarm



Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)

2.2.2 Setup of Fish From

Alarm1- Fish From

This is to set the start depth to sound alarm for fish schools.

- 1. Press MENU
- 2. Select [Alarm1] [Fish From].
- 3. Press [▶] of

The setup box of [Fish From] will be displayed.



- 4. Pressing [▲] and [▼] keys, set Fish From.
- 5. Consecutively, to set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.3, when [Fish Span] is set.
 - (2) Go to item 2 of 2.2.4, when [Upper Level] is set.
 - (3) Go to item 2 of 2.2.5, when [Lower Level] is set.
 - (4) Go to item 2 of 2.2.6, when [Alarm Signal Length] is set.
 - (5) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.

2.2.3 Setup of Fish Span

Alarm 1 - Fish Span

This is to set the range from the start point to sound alarm for fish schools.

- 1. Press MENU
- 2. Select [Alarm1] [Fish Span].

3. Press [▶] of



The setup box of [Fish Span] will be displayed.



- 4. Pressing [▲] and [▼] keys, set Fish Span.
- 5. To set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.4, when [Upper Level] is set.
 - (2) Go to item 2 of 2.2.5, when [Lower Level] is set.
 - (3) Go to item 2 of 2.2.6, when [Alarm Signal Length] is set.
 - (4) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.


2.2.4 Setup of Upper Level

Alarm1 - Upper Level

This is to set the upper limit level of fish school response to sound the fish school alarm.

- 1. Press MENU
- 2. Select [Alarm1] [Upper Level]
- 3. Press [▶] of

The setup box of [Upper Level] will be displayed.

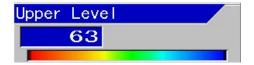

4. Pressing [▲] and [▼] keys, set Upper Level.

The color level that is weaker than the preset color level is regarded as fish schools.

This is to set the range of color level

0093101114-03 2-3

Chapter 2 Alarm CVS-FX1

where warning is activated together with the preset value of the [Lower Level].

- 5. To set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.5, when [Lower Level] is set.
 - (2) Go to item 2 of 2.2.6, when [Alarm Signal Length] is set.
 - (3) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.


2.2.5 Setup of Lower Level

Alarm1 - Lower Level

This is to set the lower limit level of fish school response to sound the fish school alarm.

- 1. Press MENU .
- 2. Select [Alarm1] [Lower Level]
- 3. Press [▶] of

The setup box of [Lower Level] will be displayed.

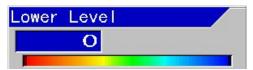

 Pressing [▲] and [▼] keys, set Lower Level.

The color level that is stronger than the preset color level is regarded as fish schools.

This is to set the range of color level where warning is activated together with the preset value of the [Upper Level].

- 5. To set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.6, when [Alarm Signal Length] is set.
 - (2) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.


2.2.6 Setup of Alarm Signal Length

Alarm1 - Alarm Signal Length

This is to set the signal length of fish schools to sound the fish school alarm.

- 1. Press MENU
- 2. Select [Alarm1] [Alarm Signal Length]
- 3. Press [▶] of

The setup box of [Alarm Signal Length] will be displayed.

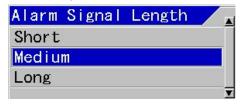

4. Pressing [▲] and [▼] keys, set Alarm Signal Length.

At [Short], even a small response is judged as fish school.

At [Long], continuous strong response is judged as fish school.

At [Medium] the judgment is intermediate between Short and Long.

- 5. To set the Fish Alarm related items subsequently:
 - (1) Go to item 2 of 2.2.7, when [Fish Image] is set.
- 6. Press MENU to close the menu.

2.2.7 Setup of Fish Image

Alarm1 - Fish Image


To select a screen (Frequency) to sound fish school alarm.

- 1. Press MENU
- 2. Select [Alarm1] [Fish Image].
- 3. Press [▶] of **(()**

2-4 0093101114-03

CVS-FX1 Chapter 2 Alarm

The setup box of [Fish Image] will be displayed.

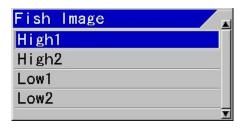

- Pressing [▲] and [▼] keys, set Fish Image.
- 5. Press MENU to close the menu.

2.3 Use Water Temp Alarm

This is to deliver alarm sound and display when water temperature falls in the set range or it falls outside of the set range.

This is a convenient function to stay within a specific water temperature range.

The contents to use this Water Temp Alarm are as follows:

- Start/Stop the Water Temp Alarm
- Set the Upper Temp Alarm
- Set the Lower Temp Alarm


2.3.1 Start/Stop Water Temp Alarm

Alarm2 - Water Temp Alarm

This is to set "Water Temp Alarm" to be activated in the preset range, out of the preset range or to deactivate..

- 1. Press MENU
- 2. Select [Alarm2] [Water Temp Alarm].
- 3. Press [▶] of

The setup box of [Water Temp Alarm] will be displayed.

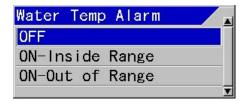

 Press [▲] and [▼] keys, to select [ON] to activate the alarm and [OFF] to deactivate.

At [ON-Inside range], alarm is delivered when entering the preset range.

At [ON-Out of range], alarm is delivered when going outside the preset range.

- 5. To set the Water Temp Alarm related items subsequently:
 - (1) Go to item 2 of 2.3.2, when [Upper Temp Alarm] is set.
 - (2) Go to item 2 of 2.3.3, when [Lower Temp Alarm] is set.
- 6. Press MENU to close the menu.

Caution: Press any key to stop any alarm sound an alarm display.

Caution: To activate the alarm sound and the alarm display again after once stopped, it is necessary for the boat to go outside of the alarm conditions.

Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)

2.3.2 Setup of Upper Temp Alarm

Alarm2 - Upper Temp Alarm


This is to set the upper limit of alarm range for Water temperature.

- 1. Press MENU
- 2. Select [Alarm2] [Upper Temp Alarm].


0093101114-03 2-5

Chapter 2 Alarm CVS-FX1

The setup box of [Upper Temp Alarm] will be displayed.

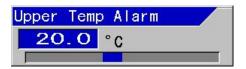

- Pressing [▲] and [▼] keys, set Upper Temp Alarm.
- 5. To set the Water Temp Alarm related items subsequently:
 - (1) Go to item 2 of 2.3.3, when [Lower Temp Alarm] is set.
- 6. Press MENU to close the menu.

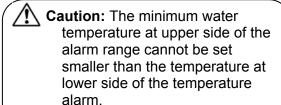


2.3.3 Setup of Lower Temp Alarm

Alarm2 - Lower Temp Alarm

This is to set the lower limit of alarm range for water temperature.

- 1. Press MENU
- 2. Select [Alarm2] [Lower Temp Alarm].
- 3. Press [▶] of .

The setup box of [Lower Temp Alarm] will be displayed.

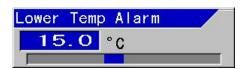

- Pressing [▲] and [▼] keys, set Lower Temp Alarm.
- 5. Press MENU to close the menu.



Caution: The maximum water temperature at lower side of the alarm range cannot be set larger than the temperature at upper side of the temperature alarm.

2.4 Use Speed Alarm

When boat speed exceeds or becomes below the set range, alarm sound an alarm indication is delivered for notification.

This is convenient where there is speed restriction.

The contents of the Speed Alarm are as follows:

- Start/Stop the Speed Alarm
- Set the Speed Limit

2.4.1 Start/Stop Speed Alarm

Alarm2 - Speed Alarm

This is to select speed alarm to be delivered when the boat speed exceeds the preset value, when the boat speed falls below the value, or deactivate the alarm.

- 1. Press MENU
- 2. Select [Alarm2] [Speed Alarm].
- 3. Press [▶] of

The setup box of [Speed Alarm] will be displayed.



 Pressing [▲] and [▼] keys, select [ON] to enable the alarm and [OFF] to delete it.

At [ON-Faster], alarm is delivered when the boat speed exceeds the specified speed.

2-6

CVS-FX1 Chapter 2 Alarm

At [ON-Slower], alarm is delivered when the speed falls less than the specified speed.

- 5. To set the [Speed Limit] related items subsequently: go to item 2 of 2.4.2.
- 6. Press MENU to close the menu.

Caution: Press any key to stop any alarm sound an alarm display.

Caution: To activate the alarm sound and the alarm display again after once stopped, it is necessary for the boat to go outside of the alarm conditions.

Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)


2.4.2 Setup of Speed Limit

Alarm2 - Speed Limit

This is to set the speed to deliver alarm.

- 1. Press MENU
- 2. Select [Alarm2] [Speed Limit].
- 3. Press [▶] of .

The setup box of [Speed Limit] will be displayed.

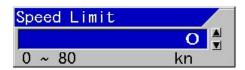

- Pressing [▲] and [▼] keys, set Speed Limit.
- 5. Press MENU to close the menu.

2.5 Use the alarm at waypoint navigation

Alarm can be used while waypoints are set. (See the Basic Operation Manual, "4.4 To use event key" or the Full Menu Reference, "3.1 Starting waypoint NAV").

The contents for the alarm function during waypoint navigation are as follows:

- Sound alarm when arrived the waypoint
- Sound alarm when course deviation is found to a waypoint.
- Set the alarm range for arrival alarm and cross track error

2.5.1 Sound alarm at arrival at waypoints

Alarm2 - Arrival Alarm

This is used after waypoints have been set. When arrived at the specified range of the waypoints, alarm will be delivered. The range shall be set at [NAV Alarm Range].

- 1. Press MENU
- 2. Select [Alarm2] [Arrival Alarm]
- 3. Press [▶] of .

The setup box of [Arrival Alarm] will be displayed.



- 4. Press [▲] and [▼] keys, select [ON] to activate the alarm and [OFF] to stop it.
- 5. To set the items related to waypoint navigation subsequently:
 - (1) Go to item 2 of 2.5.2, when [XTE Alarm] is set.
 - (2) Go to item 2 of 2.5.3, when [NAV Alarm Range] is set.
- 6. Press MENU to close the menu.

0093101114-03 2-7

Chapter 2 Alarm CVS-FX1

Caution: Press any key to stop any alarm sound an alarm display.

Caution: To activate the alarm sound and the alarm display again after once stopped, it is necessary for the boat to go outside of the alarm conditions.

Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)

2.5.2 Sound alarm when XTE to waypoint has been found

Alarm2 - XTE Alarm

This is used after waypoints have been set. This will deliver alarm when the boat deviates by the specified distance from the preset course. The distance is to be set at [NAV Alarm Range].

- 1. Press MENU
- 2. Select [Alarm2] [XTE Alarm].
- 3. Press [▶] of

The setup box of [XTE Alarm] will be displayed.



- 4. Pressing [▲] and [▼] keys, select [ON] to enable the alarm and [OFF] to stop it.
- 5. To continue setup of waypoint navigation related alarm:
 - (1) Go to item 2 of 2.5.1, when [Arrival Alarm] is set.
 - (2) Go to item 2 of 2.5.3, when [NAV Alarm Range] is set.

6. Press



MENU to close the menu.



Caution: Press any key to stop any alarm sound an alarm display.

Caution: To activate the alarm sound and the alarm display again after once stopped, it is necessary for the boat to go outside of the alarm conditions.

\ Caution: When CCD camera image is displayed, the alarm display will be only by icon display. (See "2.7 Confirmation of alarm conditions", p 2-9.)

2.5.3 Setup of NAV Alarm Range

<u> Alarm2 - NAV Alarm Range</u>


This is to set the range in which alarm starts sounding for arrival and XTE alarms. For arrival alarm, the set range will be circles. For XTE alarm, the range will be the deviation from course to waypoints.

- 1. Press MENU
- Select [Alarm2] [NAV Alarm Range].
- 3. Press [▶] of (

The setup box of [NAV Alarm Range] will be displayed.



- Pressing [▲] and [▼] keys, set NAV Alarm Range.
- 5. Press MENU to close the menu.

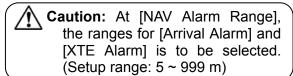

2-8 0093101114-03 CVS-FX1 Chapter 2 Alarm



Caution: The alarm setup range for [Arrival Alarm] and [XTE Alarm] cannot set individually.

2.6 Voltage Alarm

The input voltage to this equipment is continuously monitored, and alarm sound and display is delivered, when the voltage decreases or increases beyond a specified value.

The set value of power supply voltage cannot be changed.




Caution: Reduction of power voltage may lead to drop out of main power to this equipment.

2.7 Confirmation of alarm conditions

The setup conditions of [Bottom Alarm] and [Fish Alarm] can be confirmed by the bar at the right side of the screen. However, if the alarm range is outside of the screen, it will not be displayed.

When [Bottom Alarm], [Fish Alarm], [Water Temp Alarm], [Speed Alarm], [Arrival Alarm] and [XTE Alarm] are ON, icons will be displayed in the header.

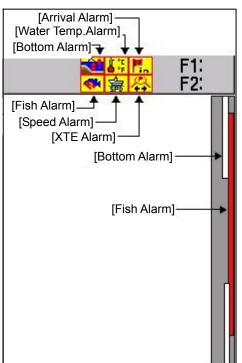

The icons for alarm represent as follow:



Bottom Alarm



Fish Alarm



Water Temp Alarm



Speed Alarm



Arrival Alarm



XTE Alarm



Voltage Alarm

0093101114-03 2-9

Chapter 3 NAV Operation

3.1 Starting waypoint NAV

NAV - NAV Start


By selecting a waypoint from the waypoint list, waypoint NAV can be started.

To start waypoint NAV, registration of waypoints are necessary. (See the Basic Operation Manual, "4.4 [To use event key])

Caution: To use [Waypoint NAV], it is necessary to connect navigation equipment such as GPS.

- 1. Press MENU
- 2. Select [NAV] [NAV Start].
- 3. Press [▶] of .


The [NAV Start] list box will be displayed.

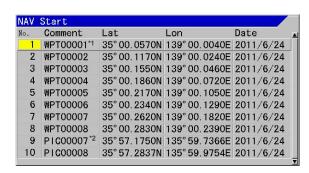

Caution: The selected list No. will turn yellow.

- 4. Using [▲] and [▼] keys, select a No. in the list to start waypoint NAV.
- 5. Press MENU

The setup box of [NAV Start] will be displayed.

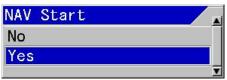

- 6. Pressing [▲] and [▼] keys, select [Yes] to start and [No] not to start.
- 7. Press ENT

When [Yes] is selected, the waypoint NAV will start taking the specified Lat/Lon as the waypoint. In addition, a plotter of NAV screen will be displayed. When the NAV screen is displayed and the plotter is not yet displayed, the display will automatically switch over to the plotter.

At the time when the waypoint NAV has started, the menu is closed. There is no need to proceed to the step 8.

When [No] is selected, the screen will return to the [NAV Start] list.

8. Press MENU to close the menu.



Caution: The starting operation of the waypoint NAV is once again performed during operation of the waypoint navigation, new navigation will start to the new waypoint selected.

3.2 Cancellation of waypoint NAV

NAV - NAV Cancel

The waypoint NAV already in progress can be cancelled on the way.

- 1. Press MENU
- 2. Select [NAV] [NAV Cancel].
- 3. Press [▶] of

0093101114-03 3-1

^{*1} WPT: The position (waypoint) that have been saved (Abbreviation of Waypoint)

^{*2} PIC: Showing that a position has been saved from images stored (Abbreviation of Picture)

The setup box of [NAV Cancel] will be displayed.



- 4. Using [▲] and [▼] keys, select [Yes] to cancel and [No] to resume navigation.
- 5. Press ENT

When [Yes] is selected, the present waypoint NAV under way will be cancelled.

When [No] is selected, the present waypoint NAV will continue.

- 6. Press **MENU** to close the menu.
- 7. Keep pressed NAV screen.

Refer to "3.6 Displaying of NAV Display" (p 3-3)

3.3 Editing of Waypoint


NAV - WPT Edit


Waypoint can be registered by input of its Lat/Lon.

The list of the registered waypoints can be edited.

- 1. Press MENU
- 2. Select [NAV] [WPT Edit].
- 3. Press [▶] of

The [WPT Edit] list box will be displayed.

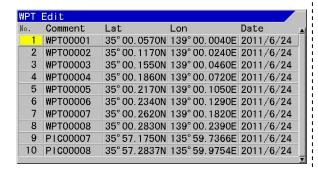

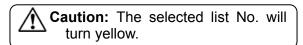

- 4. Using of [▲] and [▼] keys, select No. of list to be edited.
- 5. Press ENT
- Select characters with [▲] and [▼] keys. (Selectable characters: Comment: A ~ Z, blank, 0 ~ 9, +, -, comma, dot, /, Lat/Lon: 0 ~ 9 N, S, E, W)
- With [◄] and [▶], move the reversed positions of characters (Date can't be changed)



Caution: When Lat/Lon has not been input, the missing parts of Lat/Lon are registered as 0.

- 8. To stop editing, press
- SUB
- 9. When editing is completed, press

The setup box of [Edit End] will be displayed.



- 10. With [▲] and [▼] keys, select [Yes] for saving edited data. Select [No] for not saving.
- 11. Press MENU to close the menu.

3.4 Deletion of waypoints

NAV - WPT Delete


The waypoints registered in the past can be deleted.

To complete of the deletion, it may take some time.

- 1. Press MENU
- 2. Select [NAV] [WPT Delete].
- 3. Press [▶] of .

3-2 0093101114-03

The [WPT Delete] list box will be displayed.

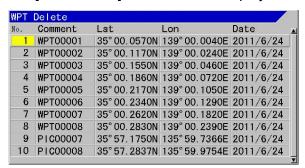

Caution: The list No. selected will turn yellow.

- Using [▲] and [▼] keys, select list No. to be deleted.
- 5. Press ENT

The setup box of [WPT Delete] will be displayed.



- 6. Using [▲] and [▼] keys, select [Yes] to delete, and select [No] for not to delete.
- 7. Press ENT

When [Yes] is selected, a message of "Waypoint data is deleting" will be displayed and returns to the [WPT Delete] list.

When [No] is selected, returns to the [WPT Delete] list.

8. Press MENU to close the menu.

3.5 Deletion of all waypoints in the waypoints list

Maintain - All WPTs:DLT

This is the function to delete all the waypoint information registered in the waypoint list.

For this deletion, it may take some time.

- 1. Press SUB
- 2. Select [Maintain] [All WPTs:DLT]

3. Press [▶] of



The setup box of [All WPTs:DLT] will be displayed.



 When all waypoints are to be deleted, select [Yes] with [▲] and [▼] keys. When deletion of all waypoints is to be cancelled, select [No].

When [Yes] is selected, a message of "Waypoint data is deleting" will be displayed and the menu will be closed.

When [No] is selected, it returns to the menu.

5. Press MENU to close the menu.

3.6 Displaying of NAV Display


There are two NAV screens, NAV1 and NAV2, and can be registered and displayed for each purpose.


The contents in display NAV screens are:

- Selection of NAV Display
- Selection of type of NAV Display

0093101114-03 3-3

Example of display:

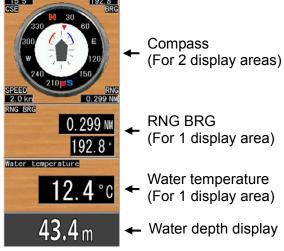

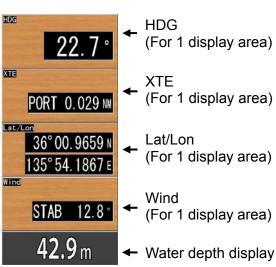


3.6.1 Selection of NAV Display

This is the function to select and display the NAV screen suitable for purposes.

1. Press for a while.

> The setup box of [NAV Display] will be displayed.

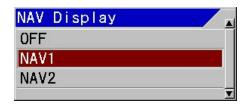

To display NAV1, select [NAV1] with [▲] and [▼] keys. To display NAV2, select [NAV2]. When the display of NAV Screen is to be cancelled, please select [OFF].

When [NAV1] is selected, the NAV screen in the configuration registered by NAV1 will be displayed.

When [NAV2] is selected, the NAV screen in the configuration registered by NAV2 will be displayed.

When [OFF] is selected, the display of NAV screen will disappear.

3. Press MENU to close the menu.

(Naution: When waypoint NAV has started and the simple plotter is not selected for the screen configuration, the screen of NAV1 will be changed to the simple plotter.


3.6.2 Selection of types of NAV Display

NAV1 or NAV2 can be selected for purposes and displayed.

The NAV screen can display simultaneously maximum 4 types of information.

1. Press


The setup box of [NAV Display] will be displayed.

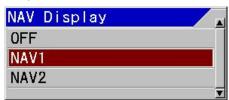

2. When navigation screen of NAV1 is to be changed, select [NAV1] with [▲] and [▼] keys. When NAV2 is to be changed, select [NAV2].

3. Press [▶] of

3-4 0093101114-03 The setup box of [NAV Display1 Select] will be displayed.

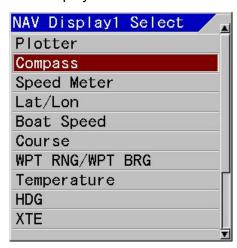

4. Using [▲] and [▼] keys, select a type suitable to the purpose.

Items to display in a display area for 2:

"Plotter" displays positional relation between own boat and a waypoint, and ship's trail. Depending on the distance from the waypoint, the display range will be automatically switched over.

Own boat (Green)


Course line (yellow)

5.0NM

Display range

"Compass" displays own boat course in upward direction and wind direction with an arrow. In addition, during waypoint navigation, a flag will be displayed at the waypoint direction.

Waypoint

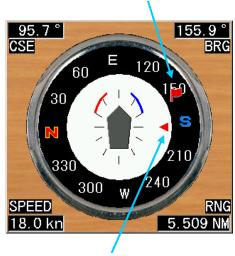

Wind direction

"Speed Meter" display own boat's speed with an analogue meter.



Items to display in a display area for 1:

"Lat/Lon" is display own position in numerical values of latitude and longitude.

"Boat Speed" displays own boat's speed in numerical value.

"Course" displays own course direction in numerical value.

"WPT RNG/WPT BRG" display distance and bearing of waypoints in numerical values at waypoint navigation.

"Temperature" displays the water temperature in numerical value.

0093101114-03 3-5

"**HDG**" displays the ship's bearing in numerical value at input.

"XTE" displays the deviated distance from the course line to a waypoint in numerical value during waypoint navigation.


"The time required" displays the amount of time required to a waypoint during waypoint navigation.

"Wind" displays wind direction in numerical value.

"Wind speed" displays the wind velocity in numerical value.

"CCD Image" displays the center image from camera images when a CCD camera is connected.

5. Press ENT to confirm the type to be displayed.

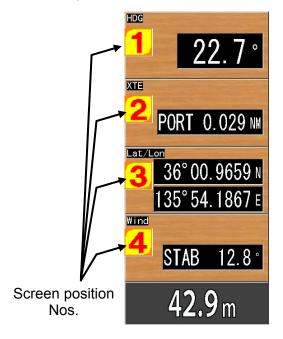

Each time ENT is pressed , the items


indicated by the screen position No. $(1 \sim 4)$ can be selected. However, the space for display is only for 4 images. Items that use display area for 1 can be displayed up to 4 kinds. When items that use display area for 2, the number of kinds displayed becomes less.

When items that use one display area are selected, setup box of [NAV Display2 (3 or 4) Select] will be displayed.

When items that use 2 display areas are

selected, the setup box of [NAV Display3 or Display4 Select] will be displayed.

To select the display area again, press

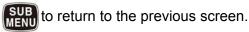

When all items to be displayed in NAV selection screen are decided, the setup box will disappear.

3-6 0093101114-03

Chapter 4 Image List

4.1 Recall of Image


Image - Image Recall


It is possible to recall an image of fish schools stored and register waypoint. (See the Basic Operation Manual, "4.4 To use event key")

During recalling of images, no images can be stored.

- 1. Press MENU
- 2. Select [Image] [Image Recall]
- 3. Press [▶] of

The [Image Recall] list box will be displayed.

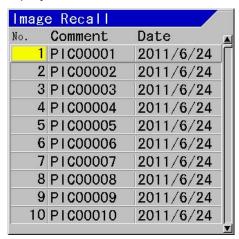

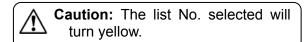

4. A short list of images can be made after search.

Further shorter list can be also made using the result.

To search images, press



The setup box of [Image List Search] will be displayed.



5. To search by comments, use [▲] and [▼] keys and select [Comment Search].

To search by dates, select [Date Search]. To search by the items without dates, select [No Date Search].

6. Press ENT



When [Comment Search] is selected, go to 7.

When [Date Search] is selected, go to 8.

When [No Date Search] is selected, the result of the search will be displayed in the [Image Recall] list and go to 9.

7. The setup box of [Comment Search] will be displayed.



Select characters using $[\blacktriangle]$ and $[\blacktriangledown]$. (Selectable characters: for comment: A ~ Z, blank, $0 \sim 9$, *, +, -, comma, dot, /)

* will be used as a wildcard character for all characters.

Using [◀] and [▶] keys, move the positions of characters highlighted in reverse.

To do comment search, press ENT



The result of the search will be displayed in the [Image Recall] list. Go to 9.

When comment search is not performed,

press SUB

The display will return to the setup box of [Image List Search]. Go back to 5.

8. The setup box of [Date Search] will be displayed.



0093101114-03 4-1 Select characters with $[\blacktriangle]$ and $[\blacktriangledown]$. (Characters: $0 \sim 9$).

Using [◀] or [▶] key, move the position of characters highlighted in reverse.

To do date search, press **ENT**



The result of the search will be displayed in the [Image Recall] list. Go to 9.

When date search is not performed,

press



The display will return to the setup box of [Image List Search]. Go back to 5.

9. Press [▲] and [▼] to select list No. of image to be displayed.

To search again,

press



The display will return to the setup box of [Image List Search]. Go back to 5.

10. Press



The [Image Recall] list box will be displayed.

11. To see the conditions when the image

was stored, press



Pressing the key again will turn off the display of conditions.

The window of setup status such as frequency at the time of storage of the image will be displayed.

- 12. Press [▲] and [▼] to recall the previous or next stored images. Recalled image will be displayed after the "It is processing" message.
- 13. To set a waypoint, move the event cursor with [◄] and [▶].

When Lat/Lon information is stored at the cursor position on the screen, waypoint navigation can be started taking the position as a waypoint.

14. When waypoint navigation is started taking the event cursor position as the waypoint, press

The recalling function of images will be ended.

The waypoint is set, and the waypoint navigation will start. Then, the plotter screen of NAV display will be displayed. (Same as 3.1 Starting of waypoint NAV)

15. Press MENU to end the image recall.


4.2 Editing of Image Comment

Image - Image Comment

It is possible to change the comments on images stored.

- 1. Press MENU
- 2. Select [Image] [Image Comment]
- 3. Press [▶] of

The [Image Comment] list box will be displayed.

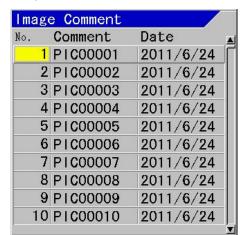



Caution: The list No. selected will turn yellow.

4. A short list of images can be made after search.

Further shorter list can be also made using the result.

To search images, press



4-2 0093101114-03

The setup box of [Image List Search] will be displayed.



5. To search by comments, select [Comment Search] using [▲] and [▼] keys.

To search by dates, select [Date Search]. To search by the items without dates, select [No Date Search].

6. Press ENT

When [Comment Search] is selected, go to 7.

When [Date Search] is selected, go to 8.

When [No Date Search] is selected, the result of the search will be displayed in the [Image Recall] list and go to 9.

7. The setup box of [Comment Search] will be displayed.



Select characters using $[\blacktriangle]$ and $[\blacktriangledown]$. (Selectable characters: for comment: A \sim Z, blank, 0 \sim 9, * , +, -, comma, dot, /)

* will be used as a wildcard character for all characters.

Using [◀] and [▶] keys, move the positions of characters highlighted in reverse.

To do comment search, press ENT



The result of the search will be displayed in the [Image Recall] list. Go to 9.

When comment search is not performed,

press SUB MENU

The display will return to the setup box of [Image List Search]. Go back to 5.

8. The setup box of [Date Search] will be displayed.



Select characters with $[\blacktriangle]$ and $[\blacktriangledown]$. (Characters: $0 \sim 9$).

Using [◀] or [▶] key, move the position of characters highlighted in reverse.

To do date search, press ENT



The result of the search will be displayed in the [Image Recall] list. Go to 9.

When date search is not performed,

press SUB MENU

The display will return to the setup box of [Image List Search]. Go back to 5.

9. Press [▲] and [▼] to select list No. of image comment to be edited.

To search is to be performed again,

press EVENT

The display will return to the setup box of [Image List Search]. Go back to 5.

10. Press



_	ge Comment	
lo.	Comment	Date
- 15	1 PI C00001	2011/6/24
:	2 P1C00002	2011/6/24
(3 P1C00003	2011/6/24
	4 P1C00004	2011/6/24
ć	5 P1C00005	2011/6/24
(6 P1C00006	2011/6/24
-	7 P1C00007	2011/6/24
	B P1C00008	2011/6/24
(P1C00009	2011/6/24
10	PIC00010	2011/6/24

- Select characters using [▲] and [▼].
 (Selectable characters: for comment: A ~ Z, blank, 0 ~ 9, +, -, comma, dot, /)
- 12. Using [◀] and [▶] keys, move the positions of highlighted characters in reverse. (Dates cannot be changed)

0093101114-03 4-3

13. To end editing, press




14. After completion of editing,





The setup box of [Edit End] will be displayed.

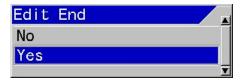

- 15. To save the edit, select [Yes] using [▲] and [▼] keys. Not to save the edit, select [No].
- 16. Press



When [Yes] is selected, a message "It is processing" will be displayed and returns to the [Image Comment] list.

When [No] is selected, the screen returns to the [Image Comment] list.

17. Press MENU to close the menu.

4.3 Deleting of Image

Image - Image Delete


Fish school images stored in the past can be deleted.

To complete the deletion, it will take some time.

- 1. Press MENU
- 2. Select [Image] [Image Delete]
- 3. Press [▶] of



The [Image Delete] list box will be displayed.

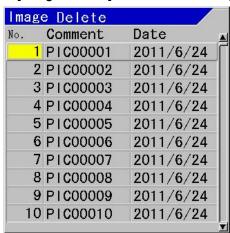



Caution: The list No. selected will turn vellow.

A short list of images can be made after search.

Further shorter list can be also made using the result.



The setup box of [Image List Search] will be displayed.



As for the searching method, see 5 of 4.1 (page 4-1).

- 5. Select list No. of the image to delete with [▲] and [▼] keys.
- 6. Press ENT

The setup box of [Image Delete] will be displayed.



- 7. Select [Yes] with [▲] and [▼] keys, to delete, and [No] when not to delete.
- 8. Press ENT

When [Yes] is selected, a message "Image data is deleting" is displayed and the screen returns to the [Images Delete]

When [No] is selected, the screen returns to the [Images Delete] list.


9. Press MENU to close the menu.

4.4 Deletion of all images in the Image List

Maintain - All IMG DT:DLT

This is the function to delete all images registered in the Images List. For deletion of images, it will take some time.

1. Press SUB MENU

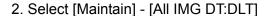



The setup box of [All IMG DT:DLT] will be displayed.



4. To delete all images, select [Yes] with [▲] and [▼] keys. When all images are not to be deleted, select [No].

When [Yes] is selected, a message of "Image data is deleting" will be displayed and the menu will be closed.

When [No] is selected, the screen will return to the menu.

5. Press MENU to close the menu.

0093101114-03 4-5

Chapter 5 System Setting

5.1 Allocation of function keys (F1/F2) to aimed operation

The operability can be improved, allocating the frequently used functions directly to keys.

The allocated functions will be displayed in the header as icons.



The functional icons display the followings:

Shift Digit input



I.R (Interference rejection)



C.E Color Erase



N.R Noise Reduction



□►■ Background Color



TVG Adjust



White Line





A Scope



AB Image Swap



Image Title



VRM Interval



√ Sona-tone





Nav Start



Image Recall



kHz Frequency



Event Key Usage



Key Lock



Depth Unit



Color Tone



B.D. Mode


5.1.1 Setup of [F1] key

System - FUNC1.Key Setting

The functions to be allocated to [F1] key shall be selected.


1. Press



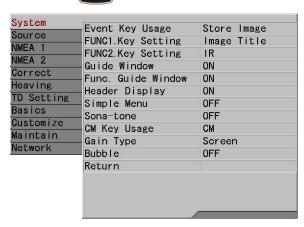

- 2. Select [System] [FUNC1. key Setting].
- 3. Press [▶] of (

The setup box of [FUNC1. key Setting] will be displayed.

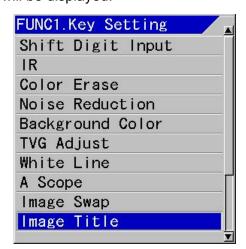

- 4. Using [▲] and [▼] keys, select functions used.
- 5. Press MENU to close the menu.

0093101114-03 5-1

5.1.2 Setup of [F2] key

System - FUNC2.Key Setting

The functions to be allocated to [F2] key shall be selected.

- 1. Press SUB MENU
- 2. Select [System] [FUNC2. key Setting]
- 3. Press [▶] of



The setup box of [FUNC2. key Setting] will be displayed.



- 4. Using [▲] and [▼] keys, select functions used.
- 5. Press MENU to close the menu.

5.2 Display/No display of Guide

This is to display guide to assist the menu operations. It is the function to display the guide for the next operation or the contents of functions without referring to the Operation manual.

5.2.1 Display/No display of Guide Window

System - Guide Window

Guide to describe the next operation clear will be displayed.

- 1. Press SUB
- 2. Select [System] [Guide Window].

3. Press [▶] of



The setup box of [Guide Window] will be displayed.

- 4. Select [ON] to display the Guide Window, and [No] not to display with [▲] and [▼].
- 5. Press MENU to close the menu.

5.2.2 Display/No display of Func. Guide Window

System - Func. Guide Window

The guide to show overview of the functions in the menu items will be displayed.

- 1. Press SUB MENU
- 2. Select [System] [Func. Guide Window].
- 3. Press [▶] of

The setup box of [Func. Guide Window] will be displayed.

- 4. Select [ON] with [▲] and [▼] to display the Guide Window, and [No] not to display.
- 5. Press MENU to close the menu.

5.3 Display/No display of Header

System - Header Display

The header to indicate the present system status will be displayed.

- 1. Press SUB MENU
- 2. Select [System] [Header Display].
- 3. Press [▶] of **(**



The setup box of [Header Display] will be displayed.

- 4. Select [ON] to display the Header and [No] not to display with [▲] and [▼].
- 5. Press MENU to close the menu.

5-2 0093101114-03

5.4 Limitation of Menu to be changed

System - Simple Menu

This is the function to turn the menu items, which are not necessary to be changed after once changed, semi-transparent display and non-operational.

1. Press SUB MENU



2. Select [System] - [Simple Menu].

3. Press [▶] of



The setup box of [Simple Menu] will be displayed.

Select [ON] to enable the function and [No] to disable with [▲] and [▼].

5. Press MENU to close the menu.

5.5 Use of Sona-tone


System - Sona-tone

The Sona-Tone[™] can be output to the built-in speaker by selection.

The schools of fish and condition of bottom on the display of echo sounder can be confirmed by hearing the sonar.

Connect the external speaker with amplifier (owner supply) so that you can hear the Sona-Tone™ easily.

1. Press SUB MENU

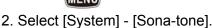

3. Press [▶] of



The setup box of [Sona-tone] will be displayed.

4. Select [ON] to enable Sona-tone output and [No] disable Sona-Tone output with [▲] and [▼].

5. Press MENU to close the menu.

<u>^</u>

Caution: The Sona-Tone[™] output is always provided. Adjust the speaker volume with the volume provided on the speaker.



Caution: The external speaker is owner supply.

5.6 To reduce frequency of Bubble

System - Bubble

This is the function to suppress the frequency of bubble.

1. Press



2. Select [System] - [Bubble].

3. Press [▶] of



The setup box of [Bubble] will be displayed.

4. Select the degree of reduction in bubbling frequency, using [▲] and ▼] keys.

At [Low], bubbling interpolation processing*1 will function for a short period at generation of bubble.

At [High], interpolation processing will work even for bubbling for certain period.

5. Press MENU to close the menu.

5.7 Display/No display of Clock

System - Clock Display

Use this function to display clock using data from external navigation equipment.

1. Press SUB



2. Select [System] - [Clock Display].

3. Press [▶] of



The setup box of [Clock Display] will be displayed.

0093101114-03 5-3

^{*1} Bubbling interpolation processing: Processing to make a part of the image vanished due to bubble, less noticeable.

Select [ON] to display the Clock, and [No] not to display with [▲] and [▼].

The clock will be displayed on the left side of the screen.

When the depth value position is changed, the clock display position also changed.

5. Press MENU to close the menu.


5.8 Changing of buzzer volume of operation

Source - Inter. Buzzer Volume

The buzzer volume of operation will be selected.

1. Press




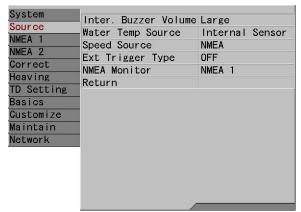

- 2. Select [Source] [Inter. Buzzer Volume].
- 3. Press [▶] of **(**

The setup box of [Inter. Buzzer Volume] will be displayed.

- 4. Select the buzzer volume of operation with [▲] and [▼] keys.
- 5. Press MENU to close the menu.

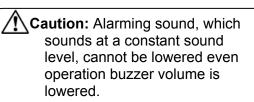

5.9 Changing of Water Temp Source

Source - Water Temp Source

The input source of water temperature in the system such as for display can be selected.

- 1. Press SUB MENU
- 2. Select [Source] [Water Temp Source].

The setup box of [Water Temp Source] will be displayed.

4. Select an input source with [▲] and [▼] keys.

[Internal Sensor] is for the water temperature sensor connected to J6 connector.

[NMEA] uses input values from external sources connected to J3 and J8 connectors.

(As for the connection to J6, J3 and J8 connectors, see the Installation Manual, "1.4.1 Connection of cables to Display unit".)

5. Press MENU to close the menu.

5.10 Changing of Speed Source

Source - Speed Source

The input source of the boat's speed in the system such as in display can be selected.

- 1. Press SUB MENU
- 2. Select [Source] [Speed Source].
- 3. Press [▶] of .

The setup box of boat's speed data input source will be displayed.

Select an input source with [▲] and [▼] keys.

[Internal Sensor] is for the internal boat's speed meter will be used.

[NMEA] uses the input value from external source connected to J3 and J8 connectors.

5-4 0093101114-03

(As for the connection to J3 and J8 connectors, see the Installation Manual, "1.4.1 Connection of cables to Display unit".)

5. Press MENU to close the menu.


5.11 Use of EXT Trigger Type

Source - EXT Trigger Type

This is the function to prevent the display of interference wave by transmission synchronization^{*1} with the other echo sounder.

1. Press SUB MENU

2. Select [Source] - [EXT Trigger Type].

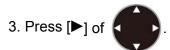

The setup box of [EXT Trigger Type] will be displayed.

Select input method with [▲] and [▼] keys:

If [_↑] is selected, the rise signal of external synchronization will be detected and transmission will be done.

If [___] is selected, the fall signal of external synchronization will be detected and transmission will be done.

5. Press MENU to close the menu.




Caution: When synchronization signal from an external echo sounder is not yet received by this equipment, image scroll will be stopped at [_↑] or [¬↓_].



5.12 Correction

[Correct] is provided to correct errors in various data input to this equipment and to improve the application environment.

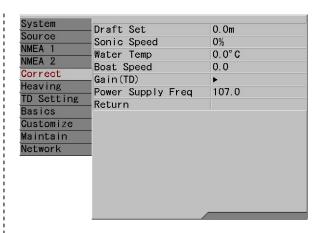

5.12.1 Setting of draft

Correct - Draft Set

This is to set the depth between the sea surface and the depth of transducer instated. Normally, it is the draft of the boat to be installed.

(Setting range: except for ft: - $10.0 \sim 10.0$, in ft: - $30.0 \sim 30.0$)

1. Press SUB MENU

2. Select [Correct] - [Draft Set].

3. Press [▶] of

The setup box of [Draft Set] will be displayed.

Setup the draft with [▲] and [▼] keys.

5. Press MENU to close the menu.

5.12.2 Correction of Sonic Speed

Correct- Sonic Speed

The error in sonic speed should be corrected in accordance with the environment of sea water or fresh water in which this equipment is used. (Setup range: - 7 ~ 2 %)

1. Press SUB MENU

2. Select [Correct] - [Sonic Speed].

3. Press [▶] of

0093101114-03 5-5

^{*1} Transmission synchronization: A function of echo sounder to transmit simultaneously (Connecting with cables, either one will be the master for synchronization)

The setup box of [Sonic Speed] will be displayed.

- Set a correction value of sonic speed with [▲] and [▼].
- 5. Press MENU to close the menu.

5.12.3 Correction of Water Temperature

Correct - Water Temp

Error of water temperature can be corrected. (Setup range: - 10.0 ~ 10.0 °C (°F))

- 1. Press SUB MENU
- 2. Select [Correct] [Water Temp].

The setup box of [Water Temp] will be displayed.

- 4. Set a correction value of water temperature with [▲] and [▼] keys.
- 5. Press MENU to close the menu.

5.12.4 Correction of Boat Speed

Correct - Boat Speed

Error of boat's speed can be corrected.

- 1. Press SUB
- 2. Select [Correct] [Boat Speed].
- 3. Press [▶] of

The setup box of [Boat Speed] will be displayed.

Set a correction value for boat speed with [▲] and [▼] keys.

When the setup of [Speed Source] is [Internal Sensor], the correction will be performed in %. (Setup range: - 50 ~ 50 %)

When the setup of [Speed Source] is [NMEA], the correction will be performed in value. (Setup range: - 10.0 ~ 10.0)

As for the confirmation of boat's speed data input source, see 5.9, "Changing of

Speed Source", p 5 - 4.

5. Press MENU to close the menu.

5.12.5 Adjustment of transducer's gain

Correct - Gain (TD)

At inner-hull installation, the insufficient gain due to ultrasonic signal attenuation can be corrected.




Caution: The set value of gain (TD) varies depending on the materials of bottom of the ship and the processing method. In some cases, low frequency side cannot be used due to too much attenuation of ultrasonic signal at ship's bottom.

- 1. Press
- SUB MENU
- 2. Select [Correct] [Gain (TD)].
- 3. Press [▶] of



The screen will turn to the gain (TD) adjustment screen and displays the gain (TD) setup box at the upper side of the screen.

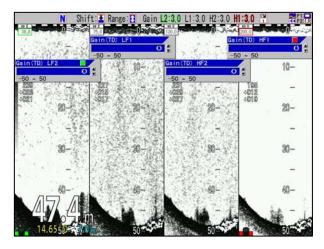


4. Setup the Gain (TD) by turning the gain knob, which are lighted red or green, at the side to be adjusted.

When a red square mark appears at right side upper corner of the Gain (TD) setup box, the red lighted gain knob shall be

0093101114-03

5-6

operated. When there is a green square mark, turn the green lighted gain knob.

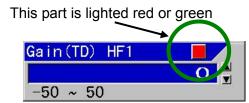

The setup value shall be adjusted so that the white line to indicate sea bottom becomes the same thickness through the whole screen.

5. Pressing the gain knob at the side to be adjusted a few times, move to the position of the Gain (TD) box to be adjusted. (the red mark at right top side will move)

When there are more than 2 screens, press the gain knob at the screen to be adjusted. The gain knob pressed will turn red. (The center screen of 3 screens will be the right side screen)

6. Press MENU to close the menu.

5.12.6 Adjustment of Power Supply Frequency

Correct - Power Supply Freq

As echo sounders' images may have noise due to influence of frequency transmitted and received by the transducer and frequency of power supply, the frequency of power supply can be adjusted.

- 1. Press
- 2. Select [Correct] [Power Supply Freq].
- Press [►] of

The setup box of [Power Supply Freq] will be displayed.


- 4. Pressing [▲] and [▼] keys, setup power frequency.
- 5. Press MENU to close the menu.

5.13 Use of Heaving

This is the function to control the seesaw movement of images by detecting the seesaw movement caused by wave by sensors, when the images of sea bottom become undulated up and down due to the influence of heave and wave.



! Caution: To use heaving*1, it is necessary to have a sensor that outputs heave sentence.

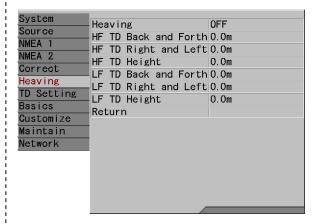

5.13.1 ON/OFF of Heaving

Heaving - Heaving

This is to enable the heaving function.

- 1. Press SUB MENII
- 2. Select [Heaving] [Heaving].
- 3. Press [▶] of


The setup box of [Heaving] will displayed.


- 4. To enable heaving function, select [ON] and when to cancel the function, select [OFF], with [▲] and [▼] keys.
- 5. Press MENU to close the menu.

0093101114-03 5-7

^{*1}Heaving: Seesaw movement of sea surface. In this context, this is the function to correct the seesaw movement of sea bottom images with GPS.

Example of display:

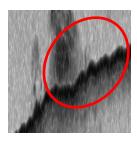

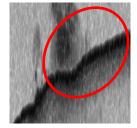

Heaving OFF

Heaving ON

When this heaving function is set [ON], the images of sea bottom will be corrected.

5.13.2 Setup of sensor's positions for Heaving

Heaving - HF TD Back and Forth

Heaving - HF TD Right and Left

Heaving - HF TD Height

Heaving - LF Back and Forth

Heaving - LF Right and Left

Heaving - LF TD Height

By setting the relation between positions of heaving sensors and the transducer, more precise correction can be obtained:


- 1. Press SUB MENU
- 2. Select [Heaving] [XX TD Back and Forth]
- 3. Press [▶] of

The setup box of [XX TD Back and Forth] will be displayed.




- 4. Pressing [▲] and [▼] keys, set the distance in the direction to back and forth.
- 5. Press [◀].
- 6. Select [Heaving] [XX TD Right and Left].
- 7. Press [▶].

The setup box of [XX TD Right and Left] will be displayed.

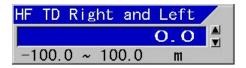

- 8. Pressing [▲] and [▼] keys, set the distance in right and left direction.
- 9. Press [◀].
- 10. Select [Heaving] [XX TD Height].
- 11. Press [▶].


The setup box of [XX TD Height] will be displayed.

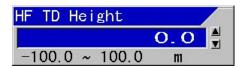

- 12. Pressing [▲] and [▼] keys, set the distance in height direction.
- 13. Press MENU to close the menu.

5.14 Setup of transducer

The frequency and beam angle etc. per transducer will be conformed to those of the transducer to be used, then, the correct information can be provided.

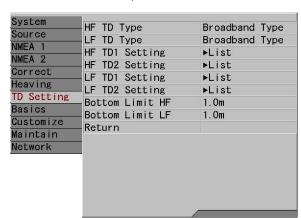

5.14.1 Setup of type of high frequency transducer

TD Setting – HF TD Type

Select the type of transducer to be actually used in high frequency. It has to be adjusted as it has influence on images.

5-8 0093101114-03

1. Press



- Select [TD Setting] [HF TD Type].
- 3. Press of [►] of

The setup box of [HF TD Type] will be displayed.


- 4. When a Broadband transducer is used, press [▲] and [▼] to select [Broadband Type]. When the other transducer is used, select [Others]. When a high frequency transducer is not used, select [OFF].
- 5. Press of [▶] of (



When [Broadband Type] is selected, the setup box of [Broadband Type] will be displayed.

Broadband	Туре	
TDM-052		
TDM-062		
TDM-083		3
		V

When [Others] is selected, the setup box of [Others] will be displayed.

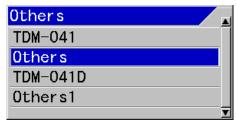

When [Others] is selected, one kind of high-frequency and one kind of low-frequency can be set up.

When [Others 1] is selected, two kinds of high-frequency and two kinds of low-frequency can be set up.

6. Press [▲] or [▼] to select the type of transducer to use.

The transducer selected as a [Broadband Type] can be reflected to the [Broadband Type] of low frequency side.

7. Press MENU to close the menu.

5.14.2 Setup of type of low frequency transducer

TD Setup - LF TD Type

Select the type of transducer to be actually used in low frequency. It has to be adjusted as it has influence on images.


1. Press MENU



- Select [TD Setting] [LF TD Type].
- 3. Press [▶] of

The setup box of [LF TD Type] will be displayed.

- 4. When a Broadband transducer is used, press [▲] and [▼] to select [Broadband Type]. When a transducer other than that is used, select [Others]. When a low frequency transducer is not used, select [OFF].
- 5. Press of [▶] of

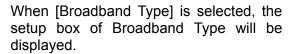

When [Others] is selected, the setup box of others will be displayed.

6. Press [▲] or [▼] to select a transducer to use.

The TD selected as a [Broadband Type] is reflected to the [Broadband Type] of high frequency side.

7. Press MENU to close the menu.

5.14.3 Setup of frequency and beam angle for HF 1 transducer

TD Setting - HF TD1 Setting


- 1. Press SUB
- 2. Select [TD Setting] [HF TD1 Setting]
- 3. Press [▶] of

0093101114-03 5-9 The setup box of [HF TD1 Setting] will be displayed.



- Select [Frequency] for changing of frequency, and [Beam angle] for changing of beam angle with [▲] and [▼] keys.
- 5. Press [▶].

When [Frequency] is selected, the setup box of frequency will be displayed.

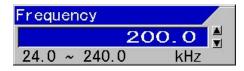


When [Beam Angle] is selected, the setup box of beam angle will be displayed.



Setup frequency or beam angle with [▲] and [▼] keys.

When [Broadband Type] is selected in 5.13.1 or 5.13.2, beam angle will be automatically set at setup of frequency.

7. Press MENU to close the menu.

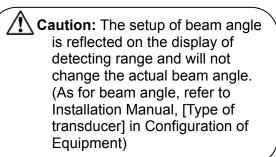

5.14.4 Setup of frequency and beam angle for HF 2 transducer

TD Setting - HF TD2 Setting

- 1. Press SUB MENU
- 2. Select [TD Setting] [HF TD2 Setting].
- 3. Press [▶] of

The setup box of [HF TD2 Setting] will be displayed.

- 4. Set as the same way as HF TD1 Setting.
- 5. Press MENU to close the menu.



Caution: The setup of beam angle is reflected on the display of detecting range and will not change the actual beam angle.

(As for beam angle, refer to Installation Manual, [Type of transducer] in Configuration of Equipment)

5.14.5 Setup of frequency and beam angle for LF 1 transducer

TD Setup - LF TD1 Setup

- 1. Press SUB
- Select [TD Setting] [LF TD1 Setting]
- 3. Press [▶] of

The setup box of [LF TD1 Setting] will be displayed.

- 4. Set as the same way as HF TD1 Setting.
- 5. Press MENU to close the menu.



Caution: The setup of beam angle is reflected on the display of detecting range and will not change the actual beam angle.

(As for beam angle, refer to Installation Manual, [Type of transducer] in Configuration of Equipment)

5-10 0093101114-03

5.14.6 Setup of frequency and beam angle for LF 2 transducer

TD Setting - LF TD2 Setting

- 1. Press SUB MENU
- 2. Select [TD Setting] [LF TD2 Setting].
- 3. Press [▶] of



The setup box of [LF TD2 Setting] will be displayed.

- 4. Set as the same way as HF TD1 Setting.
- 5. Press MENU to close the menu.

Caution: The setup of beam angle is reflected on the display of detecting range and will not change the actual beam angle.

(As for beam angle, refer to Installation Manual, [Type of transducer] in Configuration of Equipment)

5.14.7 Setup of Bottom Limit HF

TD Setting - Bottom Limit HF

To set Bottom Limit of high frequency.

- 1. Press SUB MENU
- 2. Select [TD Setting] [Bottom Limit HF].
- 3. Press [▶] of

The setup box of [Bottom Limit HF] will be displayed.



- 4. Press [▲] and [▼] to set a depth.
- 5. Press MENU to close the menu.

5.14.8 Setup of Bottom Limit LF

TD Setting - Bottom Limit LF

To set Bottom Limit of low frequency.

- 1. Press SUB
- 2. Select [TD Setting] [Bottom Limit LF].
- 3. Press [▶] of

The setup box of [Bottom Limit LF] will be displayed.

- 4. Press [▲] and [▼] to set a depth.
- 5. Press MENU to close the menu.

5.15 Setup of Basics

This is to set environmental setup such as display language, present time, GPS used.



5.15.1 Selection of Language

Basics - Language

Displayed language can be changed.



1. Press



2. Select [Basics] - [Language].

3. Press [▶] of .

The setup box of [Language] will be displayed.

0093101114-03 5-11

- 4. Pressing [▲] and [▼], select a language to be used.
- 5. Press MENU to close the menu.

5.15.2 Changing of Range & Speed Unit

Basics - Range & Speed Unit

The units in display can be changed to [NM, kn], [Km, km/h] or [sm, mph].

- 1. Press SUB
- 2. Select [Basics] [Range & Speed Unit].
- 3. Press [▶] of

The setup box of [Range & Speed Unit] will be displayed.

- 4. Pressing [▲] and [▼] keys, set units for range and speed.
- 5. Press MENU to close the menu.

Caution: With this change of units for range and speed, the set values in all related items will be converted to the values in the specified units.

5.15.3 Changing of Depth Unit

Basics - Depth Unit

The unit for depth can be changed to m, fm, I.fm, ft or J.fm.

- 1. Press SUB MENU
- 2. Select [Basics] [Depth Unit].
- 3. Press [▶] of **(**

The setup box of [Depth Unit] will be displayed.

- 4. Pressing [▲] and [▼] keys, select a unit for depth.
- 5. Press MENU to close the menu.



Caution: With this change of unit for depth, the set values in all related items will be converted to the values in the specified unit.

5.15.4 Changing of Temperature Unit

Basics - Temperature Unit

The unit of water temperature can be changed between °C and °F.

- 1. Press SUB MENU
- 2. Select [Basics] [Temperature Unit].
- 3. Press [▶] of .

The setup box of [Temperature Unit] will be displayed.

- 4. Pressing [▲] and [▼] keys, select a unit for water temperature.
- 5. Press MENU to close the menu.



Caution: With this change of unit for water temperature, the set values in all related items will be converted to the values in the specified unit.

5.15.5 Setup of Local time Offset

Basics - Local time Offset

When there is time difference between the time displayed on screen and the actual time, it is necessary to adjust it. The time difference can be set by 0.5 hour (30 minute) step. (Setup range: - 12.0 ~ 14.0 h) (World standard time 0.0 is set as reference)

- 1. Press SUB MENU
- 2. Select [Basics] [Localtime Offset].
- 3. Press [▶] of

The setup box of [Localtime Offset] will be displayed.

5-12 0093101114-03



- 4. Pressing [▲] and [▼] keys, set time difference to the world standard time.
- 5. Press MENU to close the menu.



Caution: If the Language displayed at the initial power ON is set to Japanese, this time difference is automatically set at 9.0.

5.15.6 Selection of GPS

Basics - GPS Select

This is to select the GPS sensor in use.



Caution: Only when KODEN GPS is directly connected, select [Koden GPS]. When there is no corresponding GPS sensor, please select [Others].

- 1. Press SUB MENU
- 2. Select [Basics] [GPS Select].
- 3. Press [▶] of **(**

The setup box of [GPS Select] will be displayed.



- 4. Pressing [▲] and [▼] keys, select a type of GPS.
- 5. Press MENU to close the menu.

5.15.7 Initialization of GPS

Basics- GPS Initialize


Initialization of GPS sensors is performed.



Caution: When the setting of [GPS select] is [Others], GPS cannot be initialized.

- 1. Press
- SUB MENU
- 2. Select [Basics] [GPS Initialize].
- 3. Press [▶] of


The setup box of [GPS Initialize] will be displayed.

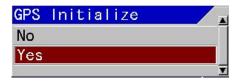

- 4. When initialization is performed, select [Yes] and initialization is not performed, select [No] with [▲] and [▼] keys.
- 5. Press ENT
- 6. Press MENU to close the menu.

5.16 Setup of NMEA

This is to setup the NMEA1 (J8) and NMEA2 (J3) related ports to enable input and output. (As for the connection of J8 and J3 connectors, see the Installation Manual, 1.4.1 "Connection of cables to Display unit")

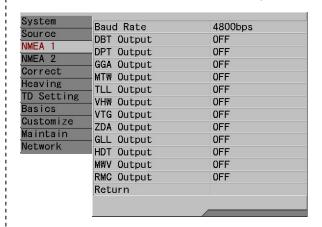

0093101114-03 5-13

5.16.1 Setup of baud rate of NMEA1 (J8)

NMEA1 - Baud Rate

This is to set baud rate of J8. Transmission rate should match the externally connected equipment.


1. Press SUB MENU



2. Select [NMEA1] - [Baud Rate].



The setup box of [Baud Rate] will be displayed.

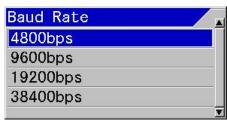

- 4. Select the baud rate at NMEA1 side with [▲] and [▼] keys.
- 5. Press **MENU** to close the men.

5.16.2 Setup of baud rate of NMEA2 (J3)

NMEA2- Baud Rate

This is to set baud rate of J3. Transmission rate should match the externally connected equipment.

1. Press




2. Select [NMEA2] - [Baud Rate].

3. Press [▶] of



The setup box of [Baud Rate] will be displayed.

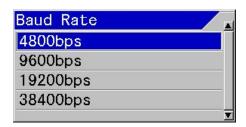

4. Select the baud rate at NMEA2 side with [▲] and [▼] keys.

5. Press MENU to close the menu.

5.16.3 Selection of NMEA Output

NMEA1 - DBT/DPT/GGA/MTW/TLL/VHW/ VTG/ZDA/GLL/HDT/MWV/RMC output

NMEA2 - DBT/DPT/GGA/MTW/TLL/VHW/ VTG/ZDA/GLL/HDT/MWV/RMC output

1. Press SUB MENU

- 2. Select [NMEA1] [Optional Output]. or [NMEA2] - [Optional Output].
- 3. Press [▶] of

The setup box of [XXX Output] will be displayed.



- 4. To enable the output, select [ON] and to disable, select [OFF] with [▲] and [▼] keys.
- 5. Press MENU to close the menu.

5.16.4 Display of input sentence on **NMEA Monitor**

Source - NMEA Monitor

This is the function to confirm the data input from NMEA1 (J8) and NMEA2 (J3).

1. Press

2. Select [Source] - [NMEA Monitor].

3. Press [▶] of

The setup box of [NMEA Monitor] will be displayed.

4. For seeing the input data of NMEA1 (J8), select [NMEA1] and for seeing the input data from NMEA2 (J3), select [NMEA2] with [▲] and [▼] keys.

5-14 0093101114-03

5. Press [▶].

The monitor on the specified NMEA side will be displayed. The data input will be displayed white or yellow for the strings of characters.

6. For temporary stopping, press [▶].

When stopped temporarily, the monitor image will stop and the data displayed can be confirmed.


- 7. For restarting, press [▶].
- 8. Press



to close the menu.

5.17 Customization

When displayed targets (fish mark, sea bottom, etc.) on the screen are not easy to see or the image coloration of the echo sounder is required to be changed, it can be changed to desired color or coloration.

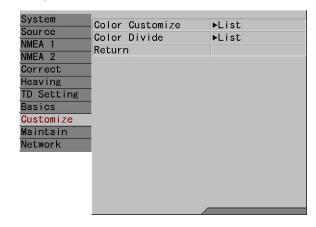

5.17.1 Changing of color of displayed items

Customize - Color Customize


The specific parts of displayed characters and scales can be changed.

1. Press SUB MENU

2. Select [Customize] - [Color Customize].


3. Press [▶] of

The setup box of [Color Customize] will be displayed.

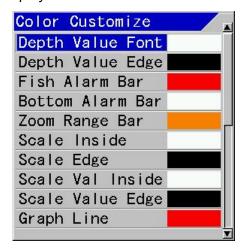

- Select the item of which color to be changed with [▲] and [▼] keys.
 There are 21 items of which color can be changed.
- 5. Press [▶].

The setup box of the color change RGB*1 for the specified item will be displayed.

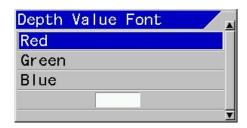


Select color with [▲] and [▼] keys.

By changing the component values of three primary colors, red, green and blue, desired colors can be set.

The sample of presently set color will be displayed at lower part of the box.

7. Press [▶].

The setup box of RGB will be displayed.

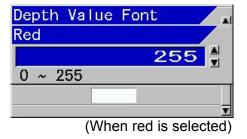

^{*1} RGB setup: Setup of three primary colors of light: R (red), G (green) and B (blue)

0093101114-03 5-15

When blue is selected, the setup box of blue component will be displayed. When green is selected, the setup box of green component will be displayed.

8. Adjust color brightness with [▲] and [▼] keys.

If color brightness is adjusted, the actual color in display will be indicated at the lower part of the setup box.

9. Subsequently, other colors are to be changed, press [◄].

The setup box of the color change RGB for the specified item will be displayed.

- 10. Repeat the steps 6 to 9.
- 11. Press MENU to close the menu.

5.17.2 Changing of coloration of image of Color Bar Scale

Customize- Color Divide

The coloration of image of Color Bar Scale will be set.

1. Press SUB

2. Select [Customize] - [Color Divide].

3. Press [▶] of

The setup box of [Color Divide] will be displayed.

- 4. Select the color to be changed with [▲] and [▼] keys.
- 5. Press [▶].

The setup box of the specified color will be displayed.

Set the [Color Divide] with [▲] and [▼] keys.

When coloration is changed and the Color Bar Scale is displayed, the coloration of the Color Bar Scale will also change simultaneously.



Caution: If coloration under setting enters in the other coloration area at changing of coloration, the coloration will also change to the coloration under setting. Therefore, it is recommended to start from the color with small ratio (blue) and to move to other color with larger ratio.

7. When changing of coloration continues to other colors, press [◄].

The setup box of [Color Divide] will be displayed.

- 8. Repeat the items 4 to 7.
- 9. Press MENU to close the menu.

5.17.3 Changing of red coloration of image of fish display

Customize- Fish Disp Col. Adj.

When mixed image is displayed, the red coloration of the fish image can be changed to have a better view.

1. Press SUB MENU .

Select [Customize] - [Fish Disp Col. Adj.].

3. Press [▶] of .

The setup box of [Fish Disp Col. Adj.] will be displayed.



Pressing [▲] and [▼] keys, set the red coloration

By changing the coloration value, desired red color can be set.

When the value is increased, the red color is stronger.

5. Press MENU to close the menu.

5-16 0093101114-03

5.17.4 Distinction of the sea bottom


Customize- B.D. Mode

This is the function to make the distinction of the edge of the sea bottom by highlighting a lower image from the edge of the sea bottom.


The upper image from the edge of the bottom sea displays normally.

1. Press SUB MENU

2. Select [Customize] - [B.D. Mode].

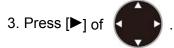

The setup box of [B.D. Mode] will be displayed.

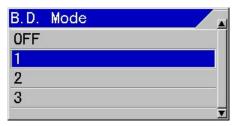

4. Select [1], [2], or [3] with [▲] and [▼] keys, and [OFF] not to display.

When the value is increased, the effect is increased.

5. Press MENU to close the menu.

5.18 Displaying of Simulation


This is the function to confirm functions and operation of the echo sounders using Simulation.

5.18.1 Displaying of prepared Simulation


Maintain - Simulation

When Simulation is turns [ON], the simulated images will be displayed.

1. Press SUB MENU

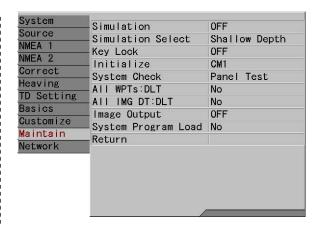

2. Select [Maintain] - [Simulation].

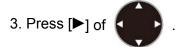

The setup box of [Simulation] will be displayed.

- To display simulation, select [ON] with [▲] and [▼] keys, and [OFF] not to display.
- 5. Press MENU to close the menu.

5.18.2 Selection of simulation

Maintain - Simulation Select

This is the function to select a type of simulation image to be displayed.

1. Press SUB MENU


2. Select [Maintain] - [Simulation Select].



The setup box of [Simulation Select] will be displayed.



- 4. Pressing [▲] and [▼] keys, select a type of simulation image.
- 5. Press MENU to close the menu.

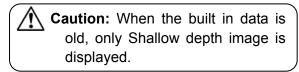

0093101114-03 5-17

5.19 To lock the keys not to be operated

Maintain - Key Lock

This is to disable the functions of knobs and keys. This prevents the functions once setup from being changed by wrong operation.


1. Press SUB MENU

2. Select [Maintain] - [Key Lock].





The setup screen of [Key Lock*1] will be displayed.

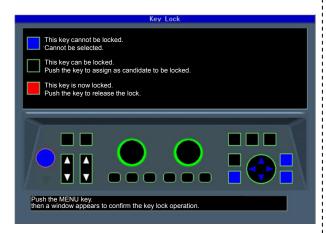

4. Press the keys to be locked in accordance with the instructions on the screen.

The keys selected as candidates to be locked will turn red. When the keys are pressed once again, they will be released and turn black.


5. After all keys to be locked are selected,



The setup box of [Key Lock] will be displayed.



6. To lock keys, select [Yes] and not to lock keys, select [No] with [▲] and [▼] keys.

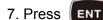



Locking status or lock release status will be confirmed.



Caution: When key lock is turned to [No] having candidate keys selected, those keys are not locked.

5.20 Returning to the Initialize

Maintain - Initialize

This is to return all setup of each CM or the whole system to the factory default settings. However, waypoint data and image stored data will remain as they are.

1. Press SUB

2. Select [Maintain] - [Initialize].





The setup box of [Initialize] will be displayed.



 When an allocated CM is to be initialized, select [CM1] to [CM6] with [▲] and [▼] keys. To initialize the whole system, select [System ALL].

When one of [CM1] to [CM6] is selected, the set values commonly used at each CM such as selected language and units will not be initialized.

When [System ALL] is selected, all setup values including the values commonly used at each CM will be initialized.

5. Press [▶].

*1 Keys not locked:











The setup box of [CM Initialize] will be displayed.

- When initialization is performed, select [Yes] for initialization by pressing [▲] and [▼] keys, and [No] for not to initialize.
- 7. Press ENT

At [Yes], initialization will be performed. At [No], the menu will be closed.



Caution: When [System ALL] is selected, the display will be in English after initialization.

5.21 Confirming of system conditions

Maintain - System Check

As self-diagnostics, panel test or LCD test can be performed

As panel test, the present conditions of the system will be displayed at the upper side of the display screen in addition to confirmation of key inputs.

As LCD test, display will be switched over in the order of grid, white, black, red, green and blue each time the key is pressed.

1. Press



- 2. Select [Maintain] [System Check].
- 3. Press [▶] of




The setup box of [System Check] will be displayed.



- When panel test or confirmation of system conditions is performed, select [Panel Test] with [▲] and [▼] keys. For checking of LCD, select [LCD Test].
- 5. Press [▶].

When [Panel Test] is selected, the panel test screen will be displayed.

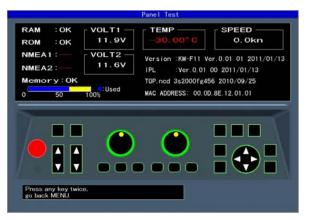

The system conditions will be displayed as shown in the above figure.

When a key is pressed, the key will be identified and the key on the corresponding screen will change in color. The same key is pressed subsequently, the System Test screen will end and the setup box of [System Check] will be displayed.



Caution: The LED on panel will turn the color from green to red if the gain knob is rotated to right or left, or one of CM1 ~ CM6 is pressed and one more pressing will turn the color to green. In addition, the internal buzzer will sound when the gain knob is rotated.

- (1) [RAM] displays the result of RAM check. OK if normal, and NG if abnormal, will be displayed.
- (2) [ROM] displays the result of ROM check. OK if normal, and NG if abnormal, will be displayed.
- (3) [NMEA1] confirms J8 port. As the confirmation will be performed when the panel test screen is displayed, mount the jig before the display of the screen.
 - "--" for not yet done, OK for normal case and NG for abnormal case will be displayed.
- (4) [NMEA2] confirms J3 port. As the confirmation will be performed when the panel test screen is displayed, mount the jig before the display of the screen.

0093101114-03 5-19

"--" for not yet done, OK for normal case and NG for abnormal case will be displayed.



Caution: For confirmation of [NMEA1] and [NMEA2] ports, the dedicated jig is necessary.

- (5) [Memory] displays the conditions of internal memory. Ok for normal case and NG for abnormal case will be displayed. The used ratio of memory is also displayed.
- (6) [VOLT1] displays the voltage value of + 12 V line.When the voltage falls in abnormal range, the indication will be in red.
- (7) [VOLT2] displays voltage of power input line. When this voltage falls in abnormal range, alarm will sound and an alarm message will be displayed.

When the voltage falls in abnormal range, the indication will be in red.

- (8) [TEMP] displays water temperature of the water temperature sensor. In the case of non connection, - 30.0 in red will be displayed.
- (9) [SPEED] displays the speed of the boat's speed sensor. In the case of abnormality, display will be in red.
- (10) [Version] displays the version No. of the system software.
- (11) [IPL] displays the version No. of IPL version.
- (12) [Top.ncd] will display the version No. of FPGA data.
- (13) [MAC ADDRESS] displays MAC address used in network.

When [LCD Test] is selected, grid will be displayed. Each time [▶] key is pressed, the color of display will change, and the setup box of [System Check] will be finally displayed.

5.22 Updating of Program


Maintain - System Program Load

This is used for program update. (Please consult your sales agent)

1. Press



- Select [Maintain] [System Program Load].
- 3. Press [▶] of

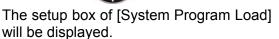

- When program is to be updated, select [Yes] and is not to be updated, select [No] with [▲] and [▼] keys.
- 5. Press



When [Yes] is selected, program will be in updating condition and a message "Updating

Do not Power Off." will be displayed.

When [No] is selected, returns to the menu.

6. The program will be downloaded from USB ROM writer or PC.

When downloading has started, [CM] keys will blink red in the order of CM1 to CM6.

At completion of downloading, the both gain knobs will be lighted red.

7. Press for about 5 seconds to switch off the power.



Caution: When program updating failed on the way, switch off the power once and switch on again. It will start up in the wait status of downloading. Try again the procedures from step 6 again.

5-20 0093101114-03


5.23 Storage of settings in internal memory

Maintain - Save Setting Value


All the CM setting value can be stored in the internal memory.

This function is used for backup.

- 1. Press SUB MENU
- 2. Select [Maintain] [Save Setting Value].

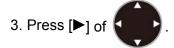

The setup box of [Save Setting Value] will be displayed.

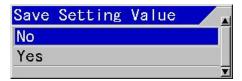

- 4. Using [▲] and [▼] keys, select [Yes] to store, and select [No] for not to store.
- 5. Press ENT

When [Yes] is selected, a message "It is processing" will be displayed. When storage is completed normally, "The setting value data saved." will be displayed. And, after a while the menu will close and display returns to the echo sounder display.

When [No] is selected, display returns to the menu.

Press



to close the menu.


5.24 Recall settings from internal memory

Maintain - Apply Setting Value

The CM setting value can be recalled from the internal memory.

- 1. Press SUB MENU
- 2. Select [Maintain] [Apply Setting Value].
- 3. Press [▶] of

The setup box of [Apply Setting Value] will be displayed.

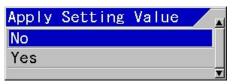

- 4. Using [▲] and [▼] keys, select [Yes] to apply, and select [No] for not to apply.
- 5. Press




When [Yes] is selected, a message "It is processing" will be displayed. When the process ends, "Completed. The setting value data applied when restarted." will be displayed.

Press for about 5 seconds to switch power off and on again.


When [No] is selected, display returns to the menu.

Press MENU to close the menu.

5.25 Setup of Network

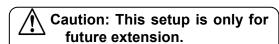

The following setup shall be done to connect with network:

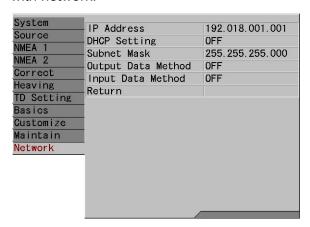

0093101114-03 5-21

5.25.1 Changing of IP Address

Network - IP Address

This is to set the IP Address for connection to network.

When connection to DHCP server is not completed yet, connect using the IP Address set here.

- 1. Press SUB MENU
- 2. Select [Network] [IP Address].
- 3. Press [▶] of

The setup box of [IP Address] will be displayed.



- 4., Change the numerical figures pressing [▲] and [▼] keys. Move the position of numerical figures to be changed with [▶] and [◀] keys.
- 5. To set the changes, press ENT



6. Not to set the changes, press



7. Press to close the menu. MENU

5.25.2 Acquisition of an IP Address from **DHCP** server

Network - DHCP Setting

This is used to obtain IP Address

automatically from DHCP server. [ON] enables automatic acquisition is enabled. At [OFF], the IP Address set by this equipment will be used.

- 1. Press
- 2. Select [Network] [DHCP Setting].
- 3. Press [▶] of

The setup box of [DHCP Setting] will be displayed.



- 4. When an IP Address is acquired from DHCP server, select [ON] and when to set it manually, select [OFF] with [▲] and [▼] keys.
- 5. Press MENU to close the menu.


5.25.3 Changing of Subnet Mask

Network - Subnet Mask

To set subnet mask.

- 1. Press
- Select [Network] [Subnet Mask].
- 3. Press [▶] of

The setup box of [Subnet Mask] will be displayed.

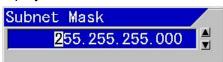

- 4. Change the numerical figures by pressing [▲] and [▼] keys. Move the positions of numerical figures to be changed by using [►] and [◄] keys.
- 5. To set the change, press



6. When the changes are not set,

press SUB

7. Press MENU to close the menu.

5.25.4 Output Data Method/Not output

Network - Output Data Method

Output method of echo sounder image information to be transmitted to CVS-FX1 can be selected.

- 1. Press
- Select [Network] [Output Data Method].

5-22 0093101114-03 3. Press [▶] of



The setup box of [Output Data Method] will be displayed.

- 4. When echo sounder image information is to be output in color level*1, select [Color Level] using [▲] and [▼] keys. When echo sounder image information is output in AD level*2, select [AD Level]. When no output is made, select [OFF].
- 5. Press MENU to close the menu.

5.25.5 Input Data Method /Not input

Network - Input Data Method

Input method of echo sounder image information to be received from CVS-FX1 can be selected.

1. Press SUB



- Select [Network] [Input Data Method].
- 3. Press [▶] of

The setup box of [Input Data Method] will be displayed.

- 4. When echo sounder image information is to be input in color level, select [Color level] using [▲] and [▼] keys. When echo sounder image information is input in AD level, select [AD level]. When no input is made, select [OFF].
- 5. Press MENU to close the menu.

5.25.6 Acquisition of images from Image List by PC

Maintain - Image Output

This is to let external PCs accessible to the image memory data stored in the equipment.

Connect a PC to the network.

1. Press



- 2. Select [Maintain] [Image Output].
- 3. Press [▶] of

The setup box of [Image Output] will be displayed.

- 4. When the access from PCs is permitted, select [ON] and not permit, [OFF] using [▲] and [▼] keys.
- 5. Press MENU to close the menu.

0093101114-03 5-23

^{*1} Color level: Strength of the color coded depending on the strength of reflected signal (echo)

^{*2} AD level: Strength of reflected signal (echo)

Chapter 6 CCD Camera

To display images of CCD camera, prepare a CCD camera separately and connect it with a video cable.

6.1 Display of CCD camera images


It is possible to display CCD camera images without any operation of menu, etc..

1. Press



for a while.

CCD camera images will be displayed.

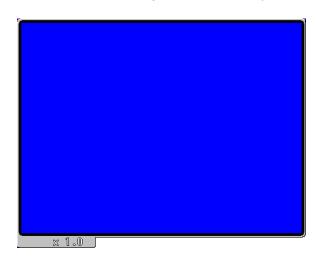

2. Press MENU

CCD camera image screen will be closed.

6.1.1 Scrolling of CCD camera images

This is the function to look into images of CCD camera with scrolling to the left, right, up and down of image ranges enlarged.

It is operative under the display of CCD camera images on screen.


1. Press keys of



and move to the

part to display.

The image on CCD camera will scroll to the left, right, top and bottom.

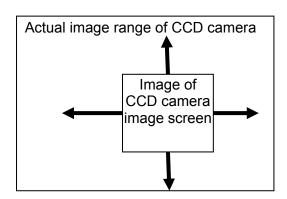



Caution: There may be cases that no scrolling is available due to the enlargement factor of images displayed.

6.1.2 Return the images of CCD camera to the center


This is the function to return to the center of images after scrolling.

It is operative under display of CCD camera images on screen.

1. Press ENT .



The image returns to the center of CCD camera image.

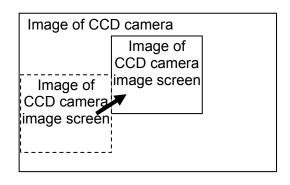

0093101114-03 6-1

6.1.3 Zoom/Reduce of CCD camera images

This is the function to enlarge a part of CCD camera image for detailed display and to reduce for total view.

This is operative under display of CCD camera images on screen.


1. Press [▲] and [▼] of RANGE



With [▲] key, images will be zoomed. With [▼] key, images will be reduced.

The enlargement factor of images will vary in a range of 0.8 to 4.0.

The enlargement factor will be displayed at the left lower corner as shown in the below figure.

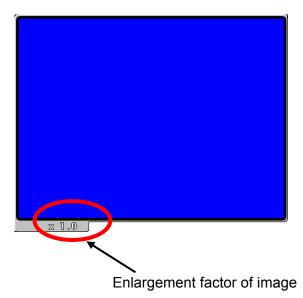

6-2 0093101114-03

CVS-FX1 INDEX

Chapter 7 INDEX

1	7
•	`

A Scope	1-4
Alarm Signal Length	2-4
Alarm1	2-1, 2-2, 2-3, 2-4
Alarm2	2-5, 2-6, 2-7, 2-8
All IMG DT:DLT	4-5
All Screens same	1-14, 1-15
All WPTs:DLT	3-3
Apply Setting Value	5-21
Arrival Alarm	2-7, 2-8, 2-9
В	
B.D. Mode	5-17
Background Color	
Basics	
Baud Rate	
Beam angle	
Boat speed1-12	
Bottom Alarm	
Bottom Limit HF	,
Bottom Limit LF	
Bottom Search Range	
Broadband transducer	
BTM Search	
Bubble	•
	1 11,
С	
CCD camera	266162
CCD Image	
Color Per Socie	
Color Bar Scale	
Color Customize	
Color Divide	
Color Tone	
Compass	
Correct	
Course	
Customize	5-15, 5-16, 5-17

D

DBT	5-14
Depth Font Size	1-10
Depth Position	1-11
Depth Unit	5-12
Detection Area	1-12
DHCP Setting	5-22
	5-16
Disp. Setup1	1-4, 1-7, 1-8, 1-9, 1-11
Disp. Setup2	1-6, 1-7, 1-10, 1-11, 1-12
DPT	5-14
	5-5
Dynamic Range	1-2
	_
	E
Echo Adjust	1-1, 1-2, 1-5
•	2-7, 3-1, 4-1, 4-2
	5-5
55 71	
	F
Establish 1	4.40
	1-10
	2-2, 2-3, 2-4, 2-9
	2-3 2-4
	2-4
	1-1, 1-7, 1-14, 2-4, 4-2,
•	5-3, 5-7, 5-8, 5-10, 5-11
	5-3, 5-7, 5-6, 5-16, 5-11
	5-1
	5-2
(G
Gain (TD)	5-6
	5-14
	5-14
	5-13
O. O IIIII	

GPS Select5-13

0093101114-03 7-1

INDEX CVS-FX1

Guide Window	5-2	LF TD2 Setting	5-11
		Localtime Offset	5-12
Н		Lower Depth	2-1, 2-2
11		Lower Level	2-4
HDG	3-6	Lower Temp Alarm	2-6
HDT	5-14		
Header Display	5-2		М
Heaving	i		IVI
HF TD Back and Forth		Maintain .3-3, 4-5, 5-17	, 5-18, 5-19, 5-20, 5-21, 5-23
HF TD Height	!		5-14
HF TD Right and Left	1	MWV	5-14
HF TD Type	5-9		
HF TD1 Setting	5-9, 5-10, 5-11		N
HF TD2 Setting	5-10		IN
		NAV 2-7. 2-8. 3-	-1, 3-2, 3-3, 3-4, 3-5, 3-6, 4-2
I.			2-7, 2-8
'		•	3-1, 3-2
Image	4-1, 4-2, 4-3, 4-4, 4-5		
Image Comment	i i i i i i i i i i i i i i i i i i i		3-6
Image Delete		NAV Start	3-1
Image Direction	1-7	Network	5-20, 5-22, 5-23
Image Output	5-23	Night mode	1-5
Image Recall	4-1, 4-2, 4-3	NMEA1	5-14, 5-19
Image Split	1-8	NMEA2	5-13, 5-14, 5-19
Image Swap	1-7		
Image Title	1-7		0
Initialize	5-13, 5-18, 5-19		O
Input Data Method	5-23	Optimized	1-2
Inter. Buzzer Volume	5-4	•	5-22
Internal memory	5-21	•	
IP Address	5-22		Р
			ı
K		Panel Test	5-19
		Plotter	3-1, 3-5, 4-2
Key Lock	5-18	Power Supply Freq	5-7
L			R
Language	5-11	Range	5-12
Lat/Lon	3-1, 3-2, 3-5, 4-2	•	5-12
LCD Test	5-19, 5-20		1-15
LF Back and Forth	5-8	- '	1-15
LF Right and Left	5-8	RMC	5-14
LF TD Height	5-8		
LF TD Type	5-9		
LF TD1 Setting	5-10		

7-2 0093101114-03

CVS-FX1 INDEX

S	TX Power (LF)1-1
O	
Save Setting Value5-21	U
Scale	
Scale Position1-6	Upper Depth2-1
Scale Value1-6	Upper Level2-3
Scr. Individual1-14, 1-15	Upper Temp Alarm2-5
Shift Operation1-14	
Shift Setup1-14	V
Simple Menu5-3	
Simulation5-17	VHW5-14
Simulation Select5-17	Voltage Alarm2-9
Sona-Tone TM 5-3	VTG5-14
Sonic Speed5-5	
Sounding Limit1-14	W
Sounding Source1-13	VV
Source 5-4, 5-5, 5-14	W. Temp. Font size1-12
Speed5-12	W. Temp. Graph1-10
Speed Alarm2-6, 2-9	W. Temp. Graph Range1-10
Speed Limit2-7	Water Alarm2-6
Speed Meter3-5	Water Temp
Speed Source5-4, 5-6	Water Temp Alarm2-5, 2-6, 2-9
Speed value1-12	Water Temp Source5-4
Sub Depth Value1-11	Water Temp Window1-10
Subnet Mask5-22	Water temperature1-10, 1-11, 2-5, 3-5,
System 5-1, 5-2, 5-3	5-4, 5-6, 5-12, 5-20
System Check5-19, 5-20	White Line1-4, 1-5, 5-7
System Program Load5-20	Width of Zoom Image1-8
	Wind3-5, 3-6
Т	Wind speed3-6
•	WPT Delete3-2, 3-3
TD Setting5-9, 5-10, 5-11	WPT Edit3-2
Temperature1-10, 1-11, 2-5, 3-5,	WPT RNG/WPT BRG3-5
5-4, 5-6, 5-12, 5-20	
Temperature Unit5-12	X
Time required3-6	^
TLL5-14	XTE2-8, 2-9, 3-6
Transducer1-1, 1-12, 5-5, 5-6, 5-7, 5-8, 5-9, 5-10	XTE Alarm2-8, 2-9
TVG1-2, 1-3	71
TVG Adjust1-2, 1-3	<u>_</u>
TVG Depth1-2, 1-3	Z
TVG Strength1-2, 1-3	704
TVG Type1-2	ZDA5-14
TX Power (HF)1-1	Zoom Image Split1-9

0093101114-03 7-3



Koden Electronics Co., Ltd.

Tamagawa Office:

2-13-24 Tamagawa, Ota-ku, Tokyo, 146-0095 Japan Tel: +81-3-3756-6501 Fax: +81-3-3756-6509

Uenohara Office:

5278 Uenohara, Uenohara-shi, Yamanashi, 409-0112 Japan

Tel: +81-554-20-5860 Fax: +81-554-20-5875

www.koden-electronics.co.jp